




OPERATING AND MAINTENANCE MANUAL

SEAFARE MTX

6/18/24

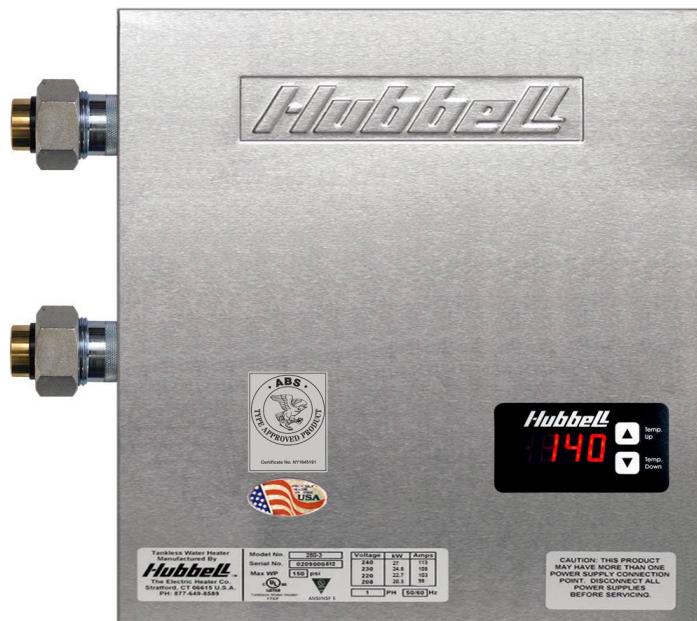

-IMPORTANT-

Always reference the full model number and serial number when calling the factory.

HUBBELL ELECTRIC HEATER COMPANY
45 SEYMORE STREET
STRATFORD, CT 06615

PHONE: (203) 378-2659
FAX: (203) 378-3593
Hubbellheaters.com

 **Important Safety Information**

1. You must read and follow all instructions. Serious bodily injury or death could occur if you ignore this warning.
2. All circuit breakers and/or disconnect switches servicing the heater must be turned off when installing, uninstalling, or repairing this water heater.
3. The Hubbell Tankless Water Heater must be grounded.
4. The unit must be wired in accordance with the current version of the National Electrical Code (US) or Canadian Electric Code (Canada).
5. This installation must comply with all national, state, and local plumbing and electrical codes.
6. When the heater is not within sight of the electrical circuit breakers, an additional local means of disconnection of all ungrounded conductors must be provided that is within sight of the appliance or a circuit breaker lockout must be used. (Ref. NEC 422.31)
7. If the Hubbell Tankless Water Heater is installed in a location where water damage could occur in the event of a leak, it is recommended that a drip pan be installed and connected to a suitable drain. Alternatively, an active water leak detector and shut off valve can be installed to turn off your water supply in the event a leak is detected.
8. If the water supply has a high mineral content, a water softening system is recommended. Damage to the water heater resulting from scale or hard minerals will not be covered under warranty.
9. If the plumbing system is prone to introducing air into the heater, it is highly recommended that an air separator be installed in the cold-water feed to the heater to avoid possible failure of the heating element and/or heating chamber.

Contents

| | |
|--|----|
| SECTION I – TANKLESS WATER HEATER OPERATING PRINCIPLE | 4 |
| How the Hubbell Tankless Marine Water Heater Works | 4 |
| SECTION II – GENERAL DESCRIPTION AND CONSTRUCTION | 5 |
| Technical Specifications Common to All Models: | 5 |
| Product Overview: | 5 |
| Tankless Water Heater Maximum Flow Rates: | 7 |
| Tankless Low Flow Pressure Drop Chart (MTX): | 8 |
| Tankless High Flow Pressure Drop Chart (MHX): | 8 |
| Wattage De-rating Formula: | 9 |
| Amperage Formula: | 9 |
| Flow Rate Formulas: | 9 |
| SECTION III – INSTALLATION | 10 |
| Locating and Mounting Instructions: | 10 |
| Plumbing Installation Instructions: | 12 |
| Piping: | 12 |
| Checking for Leaks and Purging Air: | 12 |
| Typical Accessory Piping (Optional) | 13 |
| Electrical Installation Instructions: | 13 |
| Wiring to the water heater: | 13 |
| Electrical Specifications: | 14 |
| Wiring Diagrams | 17 |
| SECTION IV – OPERATION AND MAINTENANCE | 23 |
| First Use of your Hubbell Tankless Marine Water Heater | 23 |
| Maintenance: | 23 |
| Temperature Controller User Interface Instructions | 23 |
| Remote Display | 26 |
| Priority and Remote Controls: | 26 |
| SECTION V – TROUBLESHOOTING | 30 |
| Initial Evaluation | 30 |
| Advanced Troubleshooting: | 31 |
| Tools Required: | 31 |
| Pre-Operational Procedures: | 31 |
| Check the Power Supply to the Unit: | 31 |
| Check the Transformer: | 31 |
| Check the Hi-Limit Thermostats: | 32 |

| | |
|---|-----------|
| Check the Thermistor:..... | 33 |
| Check the Flow Meter:..... | 34 |
| Check the Temperature Controller | 34 |
| Check the Triacs (Step 1)..... | 35 |
| Check the Heating Elements | 36 |
| Check the Triacs (Step 2)..... | 36 |
| SECTION VI – SERVICING AND REPLACEMENT OF PARTS..... | 37 |
| Heating Element | 37 |
| Hi-Limit Switch | 37 |
| Inlet Thermistor | 38 |
| Outlet Thermistor | 38 |
| Temperature Controller | 38 |
| Triac | 39 |
| Flow Meter..... | 39 |
| Magnetic Contactor | 40 |
| Transformer | 40 |
| Control Fuse..... | 40 |
| SECTION VII – PARTS LIST..... | 41 |
| SECTION VIII – WARRANTY | 42 |

SECTION I – TANKLESS WATER HEATER OPERATING PRINCIPLE

How the Hubbell Tankless Marine Water Heater Works:

For the most part, operating the new tankless water heater is very similar to using any traditional water heater system. However, it is very important that all the set-up procedures and operating instructions are carefully read to ensure maximum performance and energy savings from the new water heater.

The Hubbell Tankless Marine Water Heater does not store hot water like a conventional tank-type water heater. It contains high powered heating elements that are capable of heating water instantly on-demand as needed. As soon as there is a hot water demand, a sophisticated flow sensor within the heater recognizes the demand and initiates the heating process. This sensor measures the water flow rate while two other sensors measure the incoming and outgoing water temperature. This information is transmitted continually to the microprocessor controller which determines the precise amount of power to send to the heating elements to heat the water to the desired temperature. The Hubbell tankless marine water heater only uses as much power as is needed to meet the demand by fully modulating the heating elements from 0 to 100%.

It is important to keep in mind that all tankless water heaters are subject to a maximum flow rate. If this flow rate is exceeded, the heater will not be capable of fully heating water. The amount of water that can be heated by the tankless water heater at any given time will depend on the model selected and the incoming water temperature. See the charts in Section II to determine the maximum flow rates.

Moreover, since a tankless water heater eliminates the ongoing thermal losses caused by storing hot water in a tank, there will be a significant energy savings compared to a conventional tank type water heater.


SECTION II – GENERAL DESCRIPTION AND CONSTRUCTION

Technical Specifications Common to All Models:

| | | | |
|--------------------|--|----------------------|-------------------------------|
| Materials: | Copper Exchanger / Stainless Steel Casing | Plumbing Connection: | Low Flow 3/4" Copper Sweat |
| Energy Efficiency: | 98% | High Flow | 1" Copper Sweat |
| Voltage: | 208-600 Volts | Operating Range: | 5 – 150 psi |
| Frequency: | 50 / 60 Hz | Protection: | Thermal Auto Reset |

Product Overview:


Typical 2/3-Element Model

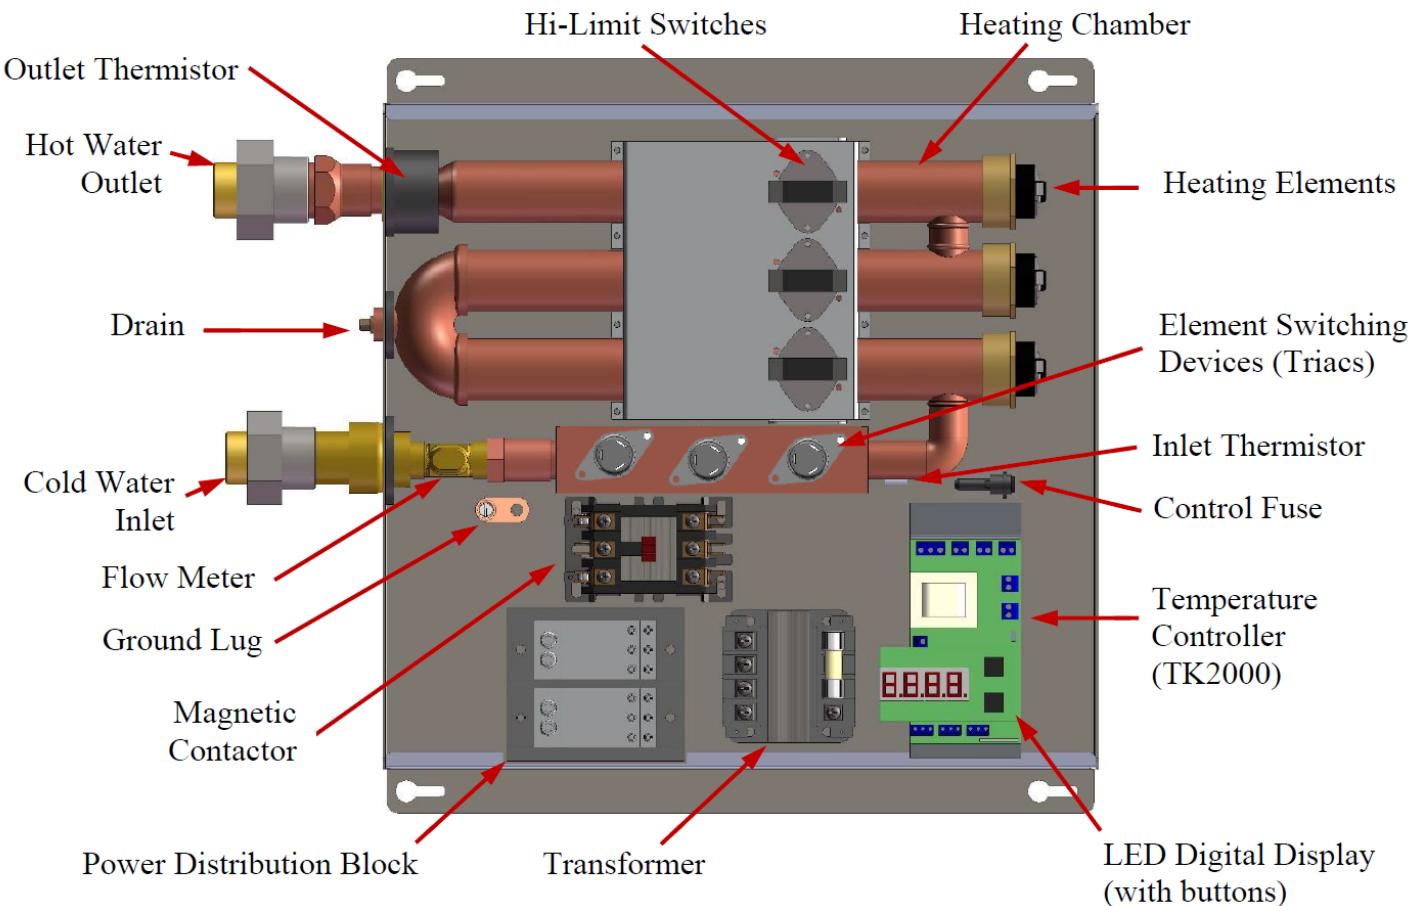

Notes:

1. Power distribution blocks are only installed on single phase models.
2. Magnetic contactors are only installed on 3-phase models.
3. Transformers are only installed on 3-phase models over 240 volts.
4. 2-Element models will have a plug in the lowest element chamber and have only two hi-limit switches and triacs installed.

Typical 6-Element Model

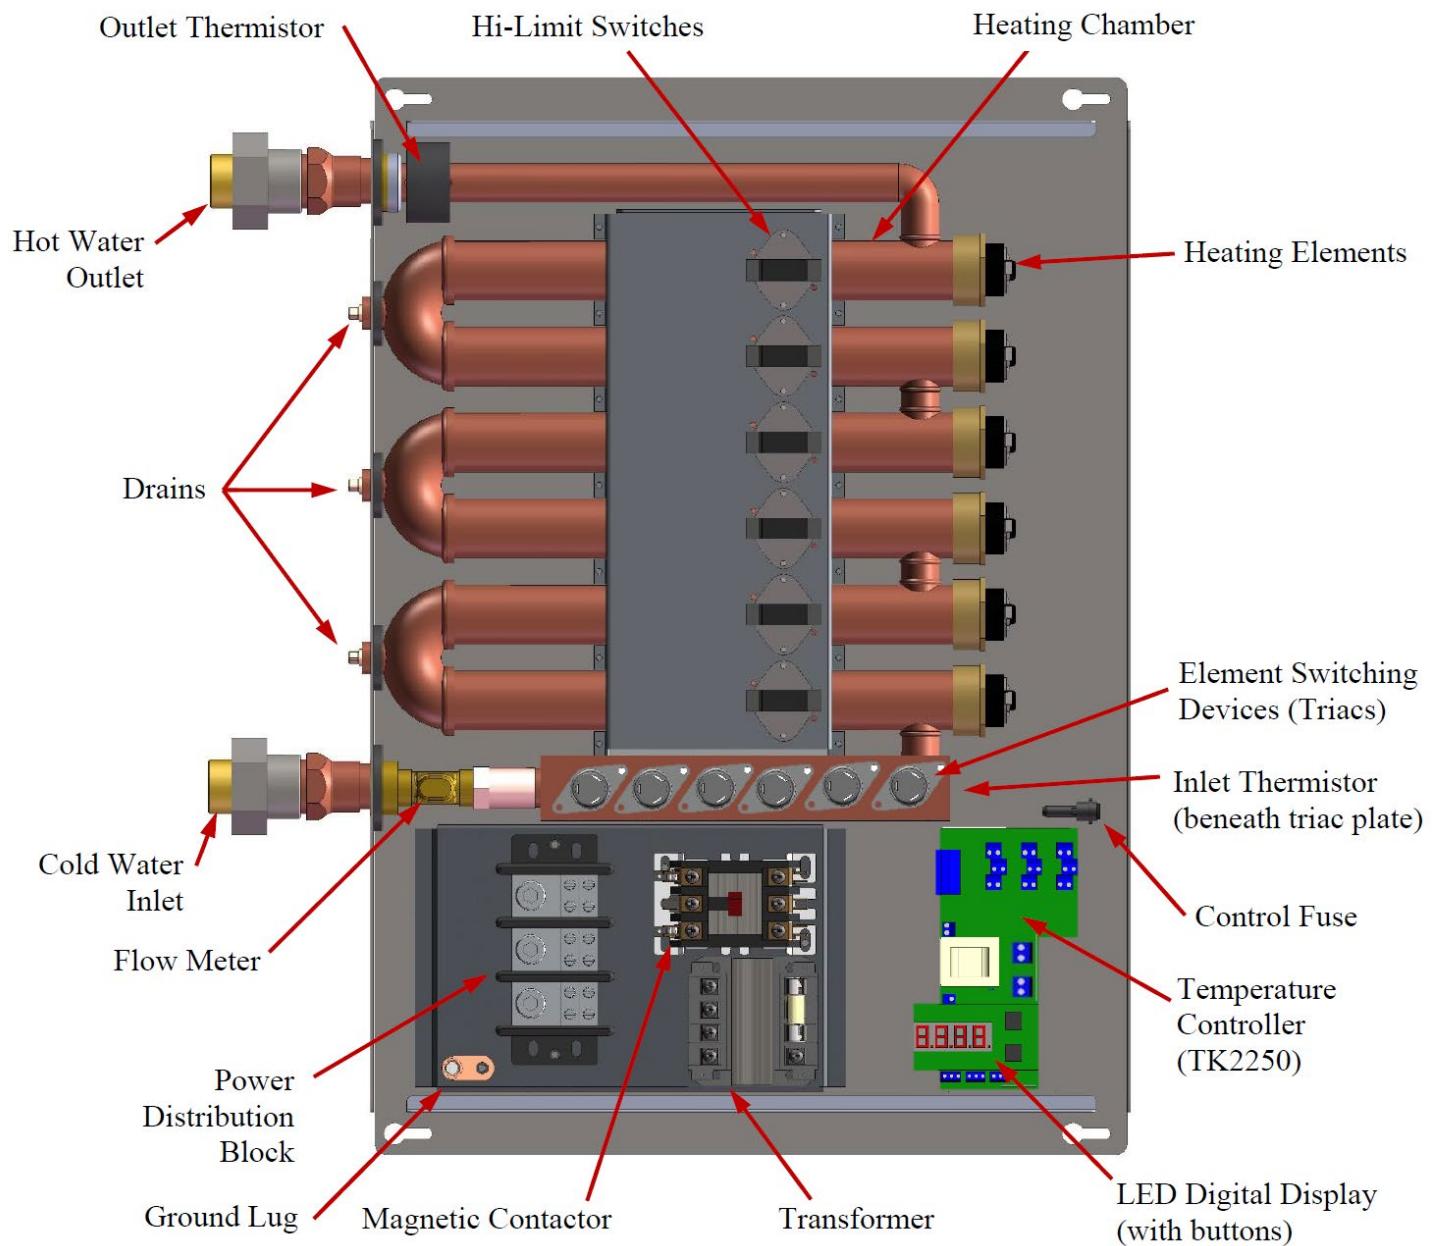

Notes:


1. Power distribution blocks are only installed on single phase models and 3-phase models that require two magnetic contactors. Single phase models use a 2-pole power distribution block.
2. Magnetic contactors are only installed on 3-phase models. One or two magnetic contactors may be installed as required.
3. Transformers are only installed on 3-phase models over 240 volts.

Tankless Water Heater Maximum Flow Rates:


| Power (kW) | Maximum Flow Rate (GPM) at Temperature Rise ($^{\circ}\text{F}\Delta\text{T}$) | | | | | | | | | | | |
|------------|--|------|------|------|------|------|------|------|------|-------|-------|-------|
| | 5°F | 10°F | 20°F | 30°F | 40°F | 50°F | 60°F | 70°F | 80°F | 100°F | 120°F | 140°F |
| 8 | 10.9 | 5.5 | 2.7 | 1.8 | 1.4 | 1.1 | 0.9 | 0.8 | 0.7 | 0.5 | 0.5 | 0.4 |
| 11 | 15.0 | 7.5 | 3.8 | 2.5 | 1.9 | 1.5 | 1.3 | 1.1 | 0.9 | 0.8 | 0.6 | 0.5 |
| 12 | 16.4 | 8.2 | 4.1 | 2.7 | 2.1 | 1.6 | 1.4 | 1.2 | 1.0 | 0.8 | 0.7 | 0.6 |
| 13 | 17.8 | 8.9 | 4.4 | 3.0 | 2.2 | 1.8 | 1.5 | 1.3 | 1.1 | 0.9 | 0.7 | 0.6 |
| 14 | 19.1 | 9.6 | 4.8 | 3.2 | 2.4 | 1.9 | 1.6 | 1.4 | 1.2 | 1.0 | 0.8 | 0.7 |
| 15 | 20.5 | 10.3 | 5.1 | 3.4 | 2.6 | 2.1 | 1.7 | 1.5 | 1.3 | 1.0 | 0.9 | 0.7 |
| 16 | 21.9 | 10.9 | 5.5 | 3.6 | 2.7 | 2.2 | 1.8 | 1.6 | 1.4 | 1.1 | 0.9 | 0.8 |
| 18 | 24.6 | 12.3 | 6.2 | 4.1 | 3.1 | 2.5 | 2.1 | 1.8 | 1.5 | 1.2 | 1.0 | 0.9 |
| 20 | 27.3 | 13.7 | 6.8 | 4.6 | 3.4 | 2.7 | 2.3 | 2.0 | 1.7 | 1.4 | 1.1 | 1.0 |
| 21 | 28.7 | 14.4 | 7.2 | 4.8 | 3.6 | 2.9 | 2.4 | 2.1 | 1.8 | 1.4 | 1.2 | 1.0 |
| 24 | 32.8 | 16.4 | 8.2 | 5.5 | 4.1 | 3.3 | 2.7 | 2.3 | 2.1 | 1.6 | 1.4 | 1.2 |
| 25 | 34.2 | 17.1 | 8.5 | 5.7 | 4.3 | 3.4 | 2.8 | 2.4 | 2.1 | 1.7 | 1.4 | 1.2 |
| 27 | 36.9 | 18.5 | 9.2 | 6.2 | 4.6 | 3.7 | 3.1 | 2.6 | 2.3 | 1.8 | 1.5 | 1.3 |
| 30 | 20.5 | | | | | | | | | | | |
| 31 | 21.2 | | | | | | | | | | | |
| 33 | 22.6 | | | | | | | | | | | |
| 36 | 24.6 | | | | | | | | | | | |
| 40 | 27.3 | | | | | | | | | | | |
| 42 | 28.7 | | | | | | | | | | | |
| 48 | 32.8 | | | | | | | | | | | |
| 50 | 34.2 | | | | | | | | | | | |
| 54 | 36.9 | | | | | | | | | | | |

1. Shaded values indicate that a High Flow (MHX) unit is required.
2. Blank values indicate that the flow rate will exceed the flow capability of the flow meter.
3. For alternate power (kW) values, the maximum flow rate can be calculated using the formulas on the following page.

Tankless Low Flow Pressure Drop Chart (MTX):

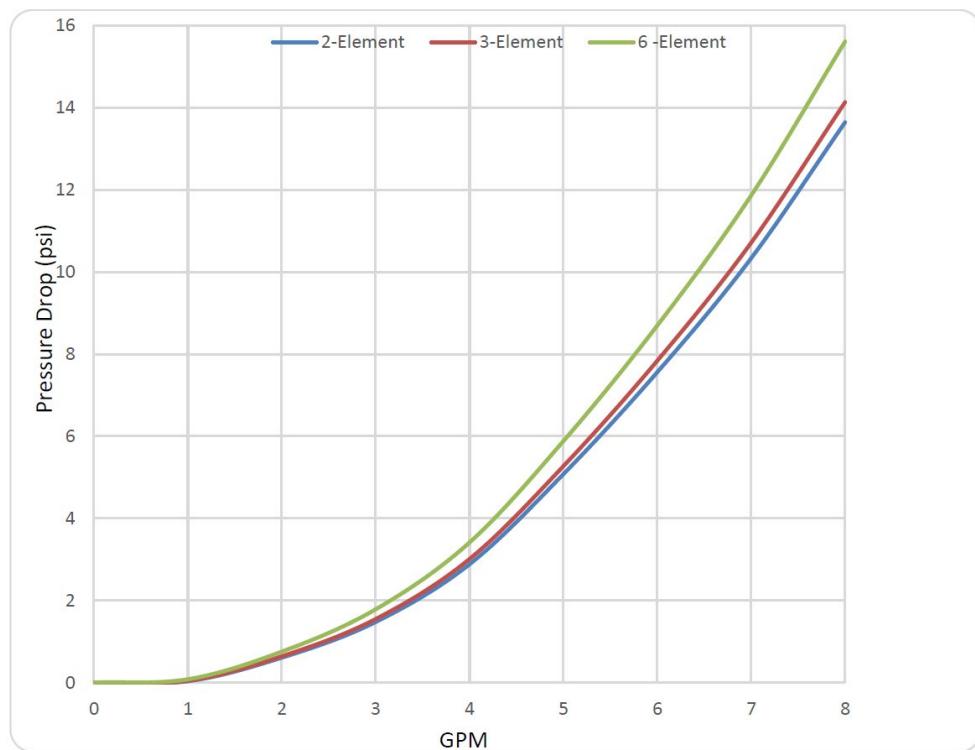

Tankless High Flow Pressure Drop Chart (MHX):

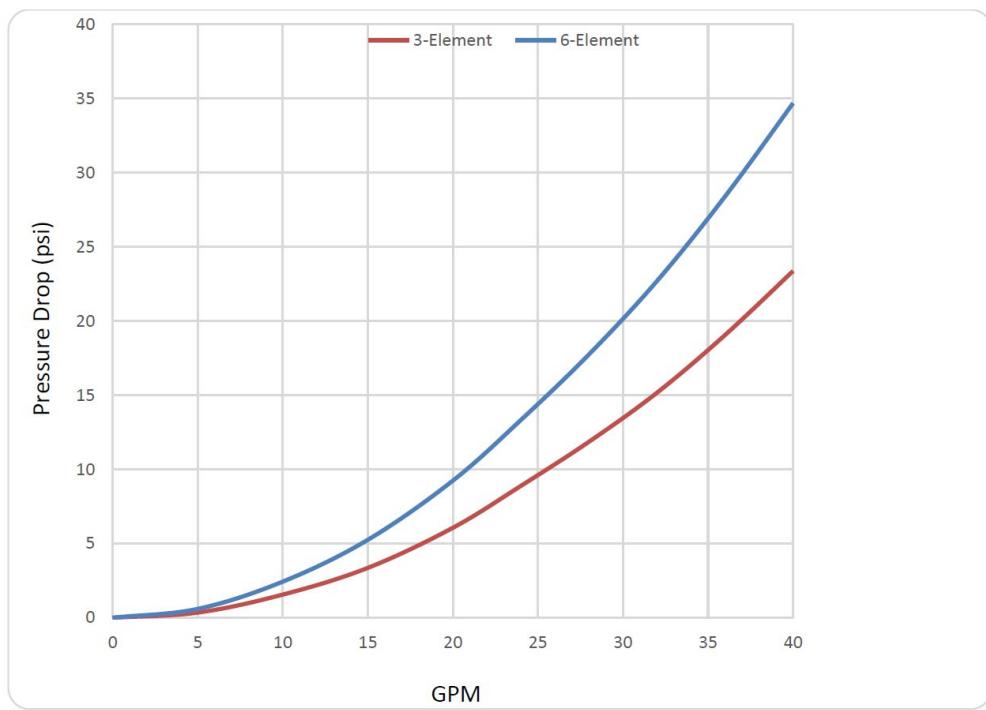

Wattage De-rating Formula:

$$\frac{\text{Applied Voltage}^2}{\text{Rated Voltage}^2} \times \text{Rated Wattage} = \text{Actual Wattage}$$

For example: If installing a 27 kW unit when actual voltage is 212 V,

$$\frac{212^2}{240^2} = \frac{44,944}{57,600} = 0.78 \times 27,000 \text{ W} = 21,060 \text{ W} @ 212 \text{ V}$$

Amperage Formula:

$$\frac{\text{Watts}}{\text{Volts}} = \text{Amps (Single Phase)} \quad \frac{\text{Watts}}{\text{Volts}} \div 1.73 = \text{Amps (3-Phase)}$$

Flow Rate Formulas:

To determine power (kW) requirement

$$\text{____ GPM} \times \text{____ } ^\circ\text{F } \Delta T \times 0.1465 = \text{____ kW}$$

To determine temperature rise

$$\text{____ kW} \times 6.824 \div \text{____ GPM} = \text{____ } ^\circ\text{F } \Delta T$$

To determine flow rate

$$\text{____ kW} \times 6.824 \div \text{____ } ^\circ\text{F } \Delta T = \text{____ GPM}$$

SECTION III – INSTALLATION



WARNING Serious bodily injury or death may occur if the following warnings are ignored.

- All circuit breakers and/or disconnect switches servicing this heater must be turned off before installing, repairing, or uninstalling this water heater.
- Installation of this product is restricted to indoor locations.
- Installation **MUST** be done by a licensed electrician and licensed plumber.

Locating and Mounting Instructions:

The Hubbell tankless marine water heater can be installed just about anywhere. Due to the small size of the water heater, it can be mounted in many small spaces. However, there are some important guidelines to follow that will ensure that the installation is both safe and convenient in the event that future servicing is required.


This product is designed to be installed indoors only. The unit may be installed in an outdoor location if it is mounted in a suitable enclosure that protects it from rain, splashed water, direct sunlight, debris, and insects. *This product should NOT be installed in a location where it may be subject to freezing temperatures.* If the water inside the tankless water heater freezes, it can cause severe and permanent damage that is not covered under the warranty. If you suspect that the tankless water heater may have frozen, do not turn on the heater until it has thawed and it has been inspected for leaks.

When selecting an installation location, consider the existing plumbing configuration, location of your main electrical panel, and location of the point of use. Try to choose a location that does not require major plumbing alterations, that is close to the main electrical panel (this will reduce the amount of wire needed to install), and that is physically close to the hot water fixtures. By locating the heater close to the points of use, this will reduce the amount of time it takes for the hot water to travel from the water heater to the point of use. Consideration should also be given to future servicing. Do NOT locate the water heater in a location that is difficult to access. In most cases, installing the tankless water heater in the same location as the old conventional tank-type water heater will make the most sense.

Avoid installing the tankless water heater in a location prone to excessive humidity, moisture, or dust, or in an area where it may be splashed with water or other liquids. Do NOT install underwater pipes or air conditioning lines that might leak or condense moisture that could then drip onto the heater. Do NOT install above electrical boxes or junctions.

Mounting the unit:

- Leave a minimum of 12" to both sides and 4" on the top and bottom of the unit.
- Mount the water heater securely to the bulkhead by putting four (4) screws through the mounting holes.
- Install a $\frac{1}{4}$ " diameter bead of sealing caulk around the entire perimeter of the heater between the heater back panel and the bulkhead. This prevents any moisture or debris from accumulating.

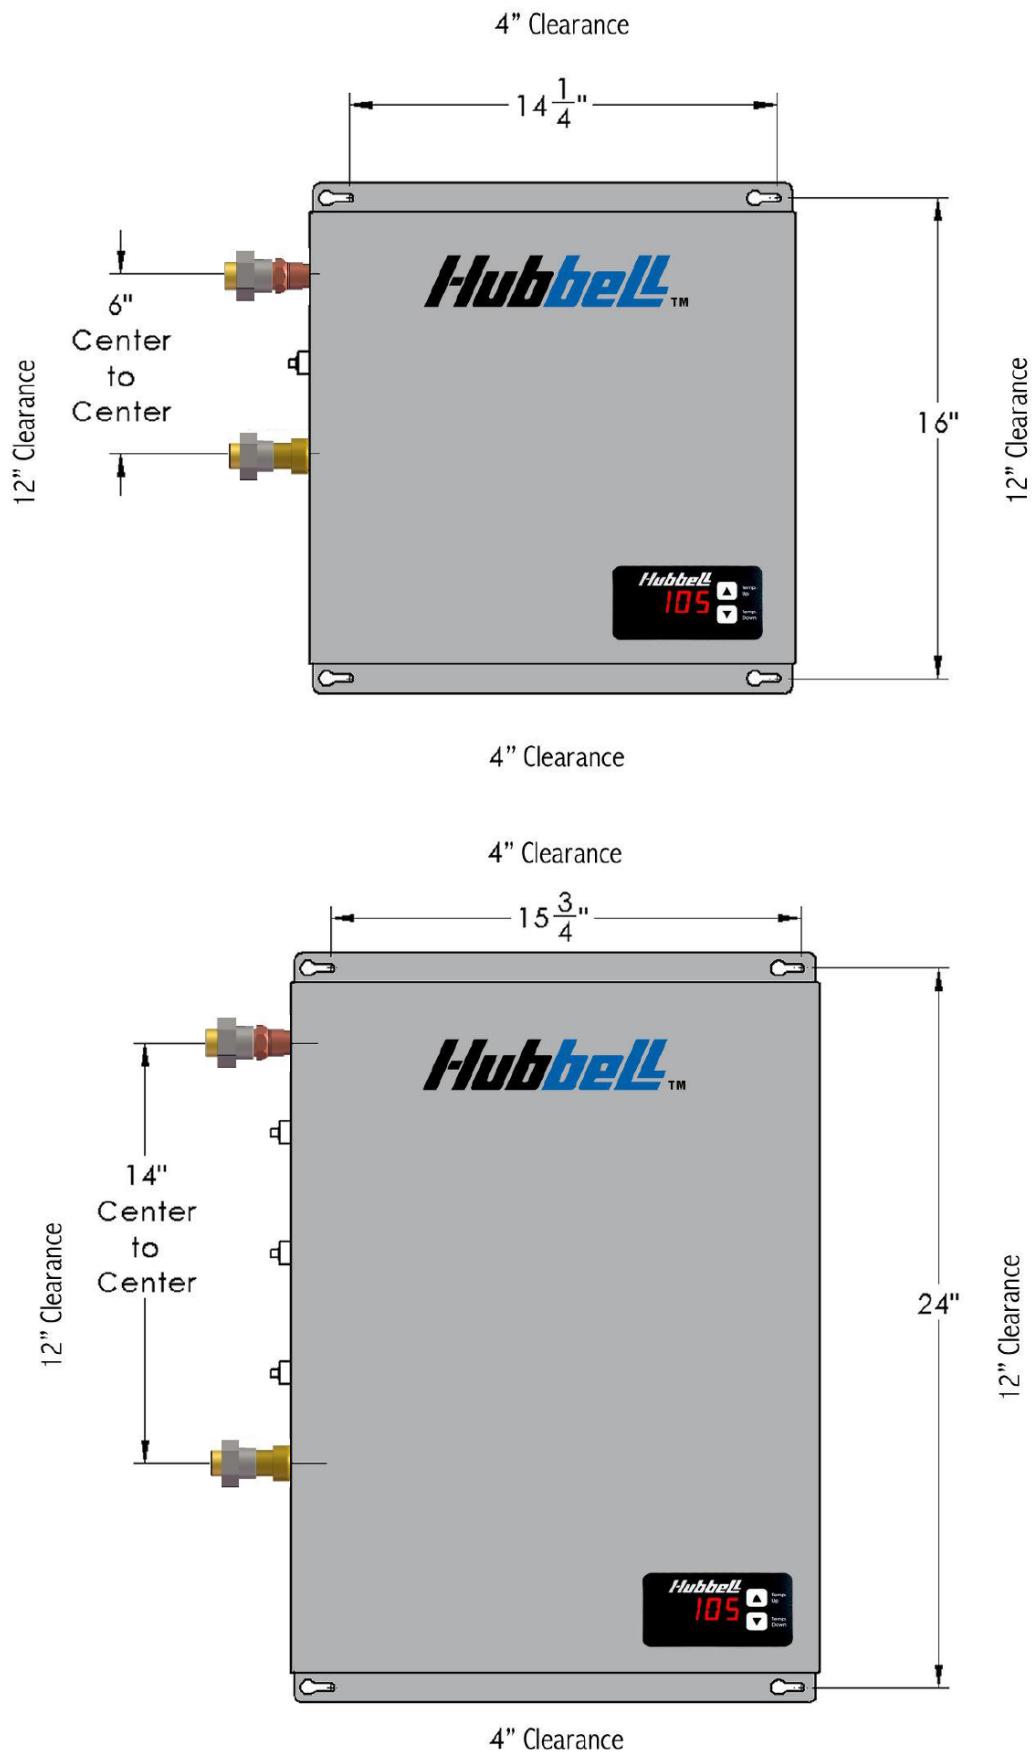

Plumbing Installation Instructions:



IMPORTANT INFORMATION:

- Ensure all fitting installations comply with appropriate codes.
- This water heater does not require a temperature and pressure (T&P) relief valve. You may install a T&P relief valve if required by code.
- When connecting to a plumbing system that utilizes Flex or PVC, a T&P relief valve should be used as added safety.
- Do not connect the unit directly to CPVC pipe or PEX tubing. You must use at least three feet of copper pipe prior to connecting to any CPVC or PEX connection.
- **WARNING:** Do not solder any pipes with the unit connected to the pipes. Doing so will damage the flow meter and void your warranty.
- Before energizing the heater, run water for a minimum of three (3) minutes and verify that all air has been removed.
- Installation of an air separator device is recommended for installations where air can be easily introduced into the water system.
- A shut off valve MUST be installed on the inlet side of unit. A shut off valve on the outlet is recommended.


Piping:

- Remove the sweat end of the dielectric fitting from the unit.
- Sweat the pipe to the dielectric union.
- Flush the line: Before connecting the union to the unit, it is extremely important to flush the lines to eliminate all plumbing paste, residue, or debris in the lines.
- Connect the union and pipe assembly to the unit.

Checking for Leaks and Purging Air:

- If the unit has been wired, verify all circuit breakers supplying power to the unit are turned off.
- Open all hot water taps supplied by the unit and inspect water connections for leaks.
- **With all hot water taps still open, allow the water to run for a minimum of 3 minutes.** Inspect each tap to ensure all air in the lines has been purged. This process purges all the air from the water lines and MUST be performed prior to turning on the power at the unit. **WARNING:** FAILURE TO FOLLOW THIS STEP CAN CAUSE PERMANENT DAMAGE TO THE HEATING ELEMENTS.
- Close all hot water taps.

Typical Accessory Piping (Optional)

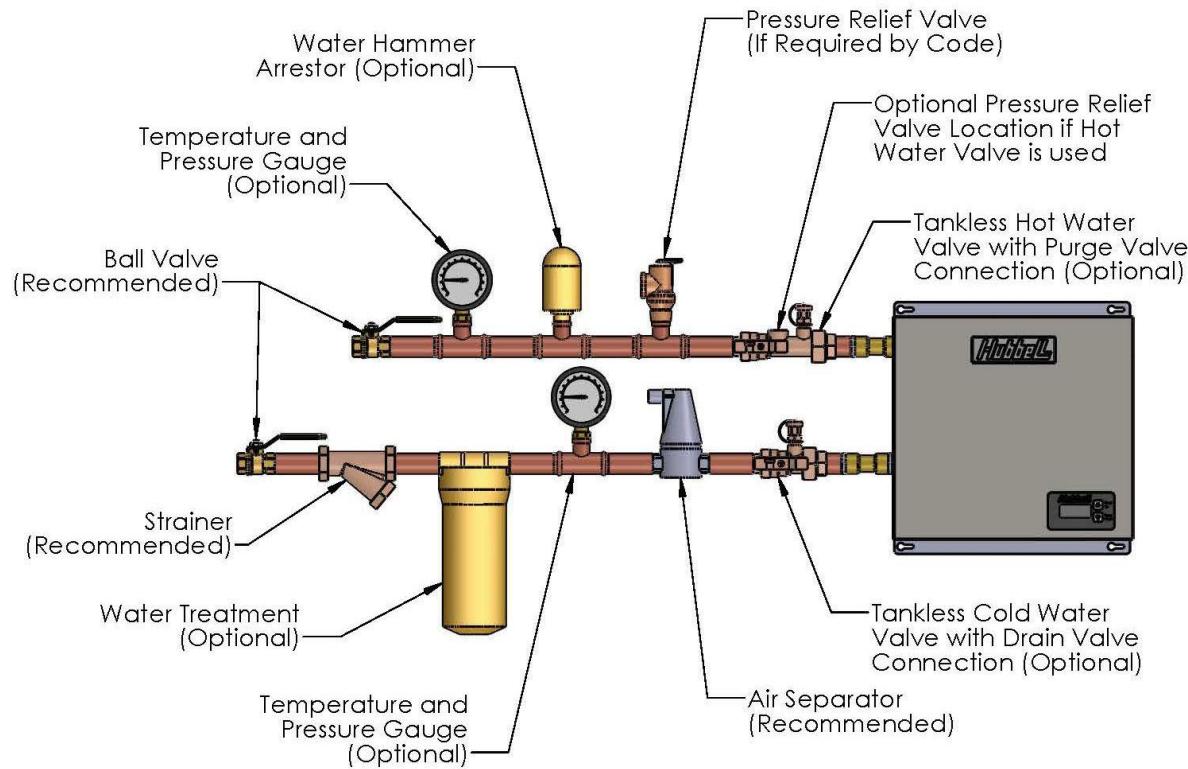

Electrical Installation Instructions:



IMPORTANT INFORMATION:

- *The unit must be wired in accordance with the current version of the National Electrical Code (US) or Canadian Electric Code (Canada).*
- The unit must have its own independent circuits.
- When the heater is not within sight of the electrical circuit breakers, an additional local means of disconnection of all ungrounded conductors must be provided that is within sight of the appliance or a circuit breaker lockout must be used. (Ref. NEC 422.31)
- Wire entry must be through the electrical KO provided in the bottom of the unit.
- For Canada, per Canadian Electric Code, C22.1-02, the unit must be wired by a single feed installation with one (1) double-pole circuit breaker.
- For US, the unit may be wired by a single feed installation with one (1) double-pole circuit breaker or by a multiple feed installation with multiple double-pole circuit breakers.

Wiring to the water heater:

- Connect the power wire from the main panel to the power distribution block or magnetic contactor as applicable.
- Connect the main ground wire to the ground lug in the heater.
- Make sure the connections are securely tightened.

Electrical Specifications:

Listed in the tables on the following page are the electrical specifications for each tankless water heater model.

- Tankless water heaters are considered a non-continuous load.
- If a multiple feed installation is used, it is acceptable to install up to two conductors in one line side port. Additionally, when a power distribution block is supplied, additional conductors may be installed in an open load side port of the power distribution block.
- Wiring sizing listed is for 75°C THHN. 60°C or 90°C wire may be used. Refer to NEC table 310.16 for sizing.
- Conductors should be sized to maintain a voltage drop of less than 3% under load.
- Electrical specifications for the High Flow (MHX) models are the same as listed for the Low Flow (MTX) models.
- For the following models, for installation in Canada per CSA requirements, a single feed is required sized as follows:
 - MTX036-6RS: 3/0
 - MTX040-6RS: 4/0
 - MTX042-6S: 3/0
 - MTX048-6RS: 250
 - MTX048-64S: 4/0
 - MTX054-6S: 250

*These models indicated require that a supplementary protection assembly be installed (supplied by Hubbell). If supplemental protection is supplied by others, where multiple feeder connections are used, phases must be from the same source.


| Model | kW | Volts / Phase | Amps | Min. Breaker Size | Wire Size (Qty.) | Conduit Size | Wiring Diagram | Element Amp Draw |
|------------|----|---------------|-------|-------------------|------------------|--------------|----------------|------------------|
| MTX005-3T5 | 5 | 440 / 3 | 6.6 | 15 | 8 | 3/4" | 5 | 6.6 |
| MTX006-3T5 | 6 | 440 / 3 | 7.9 | 15 | 8 | 3/4" | 5 | 7.9 |
| MTX007-3T5 | 7 | 440 / 3 | 9.2 | 15 | 8 | 3/4" | 5 | 9.2 |
| MTX008-2RS | 8 | 208 / 1 | 38.5 | 45 | 8 | 3/4" | 1 | 19.9 |
| MTX011-3R | 11 | 208 / 3 | 30.5 | 35 | 8 | 3/4" | 3 | 16.3 |
| MTX011-2S | 11 | 240 / 1 | 45.8 | 50 | 8 | 3/4" | 1 | 22.9 |
| MTX011-3T3 | 11 | 380 / 3 | 16.7 | 20 | 8 | 3/4" | 4 | 9.9 |
| MTX011-3T5 | 11 | 440 / 3 | 14.4 | 20 | 8 | 3/4" | 5 | 14.4 |
| MTX012-2RS | 12 | 208 / 1 | 57.7 | 70 | 6 | 3/4" | 1 | 28.9 |
| MTX012-3R | 12 | 208 / 3 | 33.3 | 35 | 8 | 3/4" | 3 | 19.9 |
| MTX013-3T3 | 13 | 380 / 3 | 19.8 | 25 | 8 | 3/4" | 4 | 11.5 |
| MTX013-3T7 | 13 | 415 / 3 | 18.1 | 20 | 8 | 3/4" | 4 | 10.8 |
| MTX013-3T5 | 13 | 440 / 3 | 17.1 | 20 | 8 | 3/4" | 5 | 17.1 |
| MTX014-2RS | 14 | 208 / 1 | 67.3 | 80 | 4 | 1" | 1 | 32.5 |
| MTX014-2S | 14 | 240 / 1 | 58.3 | 70 | 6 | 3/4" | 1 | 29.2 |
| MTX014-3T | 14 | 240 / 3 | 33.7 | 40 | 8 | 3/4" | 3 | 18.8 |
| MTX015-3T3 | 15 | 380 / 3 | 22.8 | 25 | 8 | 3/4" | 4 | 13.2 |
| MTX016-3RS | 16 | 208 / 1 | 76.9 | 90 | 4 | 1" | 2 | 25.3 |
| MTX016-3R | 16 | 208 / 3 | 44.4 | 50 | 8 | 3/4" | 3 | 25.3 |
| MTX016-2S | 16 | 240 / 1 | 66.7 | 80 | 4 | 1" | 1 | 33.3 |
| MTX016-3T | 16 | 240 / 3 | 38.5 | 45 | 8 | 3/4" | 3 | 22.9 |
| MTX016-3T7 | 16 | 415 / 3 | 22.3 | 25 | 8 | 3/4" | 4 | 12.6 |
| MTX016-3T5 | 16 | 440 / 3 | 21.0 | 25 | 8 | 3/4" | 4 | 11.5 |
| MTX018-3RS | 18 | 208 / 1 | 86.5 | 90 | 3 | 1" | 2 | 28.9 |
| MTX018-3R | 18 | 208 / 3 | 50.0 | 60 | 6 | 3/4" | 3 | 28.9 |
| MTX018-2S | 18 | 240 / 1 | 75.0 | 80 | 4 | 1" | 1 | 37.5 |
| MTX018-3T3 | 18 | 380 / 3 | 27.3 | 30 | 8 | 3/4" | 4 | 15.7 |
| MTX018-3T7 | 18 | 415 / 3 | 25.0 | 30 | 8 | 3/4" | 4 | 14.4 |
| MTX018-3T5 | 18 | 440 / 3 | 23.6 | 25 | 8 | 3/4" | 4 | 13.4 |
| MTX018-3T4 | 18 | 480 / 3 | 21.7 | 25 | 8 | 3/4" | 4 | 12.5 |
| MTX020-3RS | 20 | 208 / 1 | 96.2 | 110 | 2 | 1" | 2 | 32.5 |
| MTX020-3R | 20 | 208 / 3 | 55.5 | 60 | 6 | 3/4" | 3 | 32.5 |
| MTX020-3T3 | 20 | 380 / 3 | 30.4 | 35 | 8 | 3/4" | 4 | 17.7 |
| MTX020-3T7 | 20 | 415 / 3 | 27.8 | 30 | 8 | 3/4" | 4 | 16.2 |
| MTX020-3T5 | 20 | 440 / 3 | 26.2 | 30 | 8 | 3/4" | 4 | 15.3 |
| MTX021-3S | 21 | 240 / 1 | 87.5 | 90 | 3 | 1" | 2 | 29.2 |
| MTX021-3T | 21 | 240 / 3 | 50.5 | 60 | 6 | 3/4" | 3 | 29.2 |
| MTX021-3T5 | 21 | 440 / 3 | 27.6 | 30 | 8 | 3/4" | 4 | 15.9 |
| MTX021-3T4 | 21 | 480 / 3 | 25.3 | 30 | 8 | 3/4" | 4 | 14.6 |
| MTX021-3T6 | 21 | 600 / 3 | 20.2 | 25 | 8 | 3/4" | 5 | 20.2 |
| MTX024-6RS | 24 | 208 / 1 | 115.4 | 125* | 1 | 2" | 6 | 19.9 |
| MTX024-6R | 24 | 208 / 3 | 66.6 | 70 | 4 | 1" | 7 | 19.9 |
| MTX024-3S | 24 | 240 / 1 | 100.0 | 110 | 2 | 1" | 2 | 33.3 |
| MTX024-3T | 24 | 240 / 3 | 57.7 | 70 | 6 | 3/4" | 3 | 33.3 |

| Model | kW | Volts / Phase | Amps | Min. Breaker Size | Wire Size (Qty.) | Conduit Size | Wiring Diagram | Element Amp Draw |
|------------|----|---------------|-------|-------------------|------------------|--------------|----------------|------------------|
| MTX024-3T7 | 24 | 415 / 3 | 33.4 | 40 | 8 | 3/4" | 4 | 19.3 |
| MTX024-3T5 | 24 | 440 / 3 | 31.5 | 35 | 8 | 3/4" | 4 | 18.2 |
| MTX024-3T4 | 24 | 480 / 3 | 28.9 | 35 | 8 | 3/4" | 4 | 16.7 |
| MTX024-3T6 | 24 | 600 / 3 | 23.1 | 25 | 8 | 3/4" | 5 | 23.1 |
| MTX025-3T3 | 25 | 380 / 3 | 38.0 | 40 | 8 | 3/4" | 4 | 22.2 |
| MTX027-3S | 27 | 240 / 1 | 112.5 | 125 | 1 | 2" | 2 | 37.5 |
| MTX027-3T | 27 | 240 / 3 | 65.0 | 70 | 4 | 1" | 3 | 37.5 |
| MTX027-6T3 | 27 | 380 / 3 | 41.0 | 45 | 8 | 3/4" | 9 | 11.5 |
| MTX027-6T7 | 27 | 415 / 3 | 37.6 | 40 | 8 | 3/4" | 9 | 10.8 |
| MTX027-3T5 | 27 | 440 / 3 | 35.4 | 40 | 8 | 3/4" | 4 | 20.5 |
| MTX027-3T4 | 27 | 480 / 3 | 32.5 | 35 | 8 | 3/4" | 4 | 18.8 |
| MTX027-3T6 | 27 | 600 / 3 | 26.0 | 30 | 8 | 3/4" | 5 | 26.0 |
| MTX030-6T3 | 30 | 380 / 3 | 45.6 | 50 | 8 | 3/4" | 9 | 13.2 |
| MTX031-6RS | 31 | 208 / 1 | 149.0 | 175* | 2/0 | 1 1/2" | 6 | 25.3 |
| MTX031-6R | 31 | 208 / 3 | 86.0 | 90 | 3 | 1" | 7 | 25.3 |
| MTX031-6T7 | 31 | 415 / 3 | 43.1 | 50 | 8 | 3/4" | 9 | 12.6 |
| MTX031-6T5 | 31 | 440 / 3 | 40.7 | 45 | 8 | 3/4" | 9 | 11.5 |
| MTX033-6S | 33 | 240 / 1 | 137.5 | 150* | 1/0 | 1 1/4" | 6 | 22.9 |
| MTX033-6T | 33 | 240 / 3 | 79.4 | 90 | 4 | 1" | 7 | 22.9 |
| MTX036-6RS | 36 | 208 / 1 | 173.1 | 200* | 3(2) | 1 1/2" | 6 | 28.9 |
| MTX036-6R | 36 | 208 / 3 | 99.9 | 110 | 2 | 1" | 8 | 28.9 |
| MTX036-6T3 | 36 | 380 / 3 | 54.7 | 60 | 6 | 3/4" | 9 | 15.7 |
| MTX036-6T7 | 36 | 415 / 3 | 50.1 | 60 | 6 | 3/4" | 9 | 14.4 |
| MTX036-6T5 | 36 | 440 / 3 | 47.2 | 50 | 8 | 3/4" | 9 | 13.4 |
| MTX036-6T4 | 36 | 480 / 3 | 43.3 | 50 | 8 | 3/4" | 9 | 12.5 |
| MTX040-6RS | 40 | 208 / 1 | 192.3 | 225* | 2(2) | 2" | 6 | 32.5 |
| MTX040-6R | 40 | 208 / 3 | 111.0 | 125 | 1 | 2" | 8 | 32.5 |
| MTX040-6T3 | 40 | 380 / 3 | 60.8 | 70 | 6 | 3/4" | 9 | 17.7 |
| MTX040-6T7 | 40 | 415 / 3 | 55.6 | 60 | 6 | 3/4" | 9 | 16.2 |
| MTX040-6T5 | 40 | 440 / 3 | 52.5 | 60 | 6 | 3/4" | 9 | 15.3 |
| MTX042-6S | 42 | 240 / 1 | 175.0 | 200* | 3(2) | 1 1/2" | 6 | 29.2 |
| MTX042-6T | 42 | 240 / 3 | 101.0 | 110 | 2 | 1" | 8 | 29.2 |
| MTX042-6T5 | 42 | 440 / 3 | 55.1 | 60 | 6 | 3/4" | 9 | 15.9 |
| MTX042-6T4 | 42 | 480 / 3 | 50.5 | 60 | 6 | 3/4" | 9 | 14.6 |
| MTX042-6T6 | 42 | 600 / 3 | 40.4 | 45 | 8 | 3/4" | 10 | 40.4 |
| MTX048-6RS | 48 | 208 / 1 | 230.8 | 250* | 1(2) | 2" | 6 | 38.5 |
| MTX048-6R | 48 | 208 / 3 | 133.2 | 150* | 1/0 | 1 1/4" | 12 | 38.5 |
| MTX048-6S | 48 | 240 / 1 | 200.0 | 225* | 2(2) | 2" | 6 | 33.3 |
| MTX048-6T | 48 | 240 / 3 | 115.5 | 125 | 1 | 2" | 8 | 33.3 |
| MTX048-6T7 | 48 | 415 / 3 | 66.8 | 80 | 4 | 1" | 9 | 19.3 |
| MTX048-6T5 | 48 | 440 / 3 | 63.0 | 70 | 4 | 1" | 9 | 18.2 |
| MTX048-6T4 | 48 | 480 / 3 | 57.7 | 70 | 6 | 3/4" | 9 | 16.7 |
| MTX048-6T6 | 48 | 600 / 3 | 46.2 | 50 | 8 | 3/4" | 10 | 46.2 |


| Model | kW | Volts / Phase | Amps | Min. Breaker Size | Wire Size (Qty.) | Conduit Size | Wiring Diagram | Element Amp Draw |
|------------|----|---------------|-------|-------------------|------------------|--------------|----------------|------------------|
| MTX050-6T3 | 50 | 380 / 3 | 76.0 | 80 | 4 | 1" | 9 | 22.2 |
| MTX054-6S | 54 | 240 / 1 | 225.0 | 250* | 1(2) | 2" | 6 | 37.5 |
| MTX054-6T | 54 | 240 / 3 | 129.9 | 150* | 1/0 | 1 1/4" | 12 | 37.5 |
| MTX054-6T5 | 54 | 440 / 3 | 70.9 | 80 | 4 | 1" | 9 | 20.5 |
| MTX054-6T4 | 54 | 480 / 3 | 65.0 | 70 | 4 | 1" | 9 | 18.8 |
| MTX054-6T6 | 54 | 600 / 3 | 52.0 | 60 | 6 | 3/4" | 10 | 52.0 |

Wiring Diagrams


Tankless Wiring Diagram 1

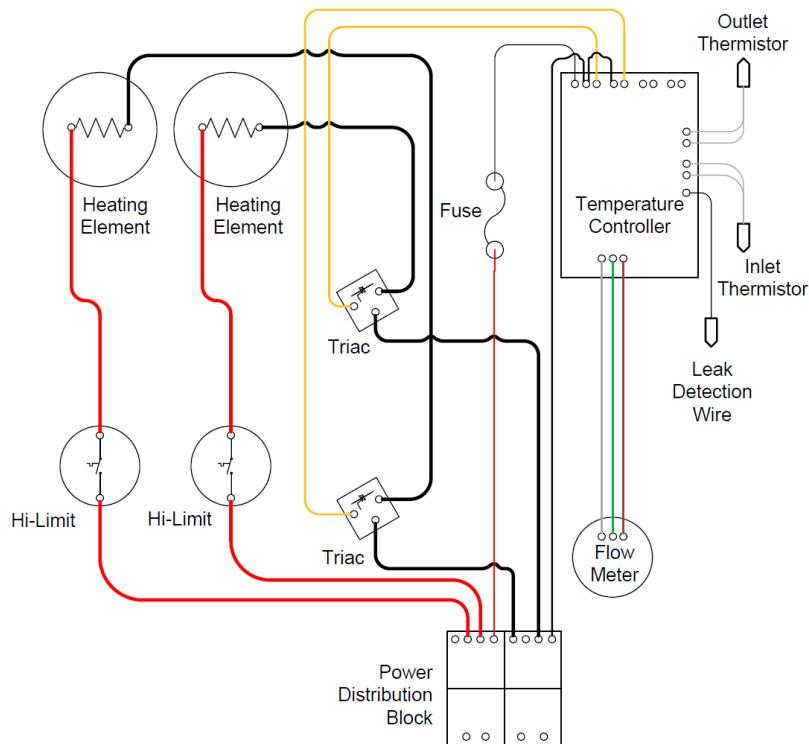


Tankless Wiring Diagram 2

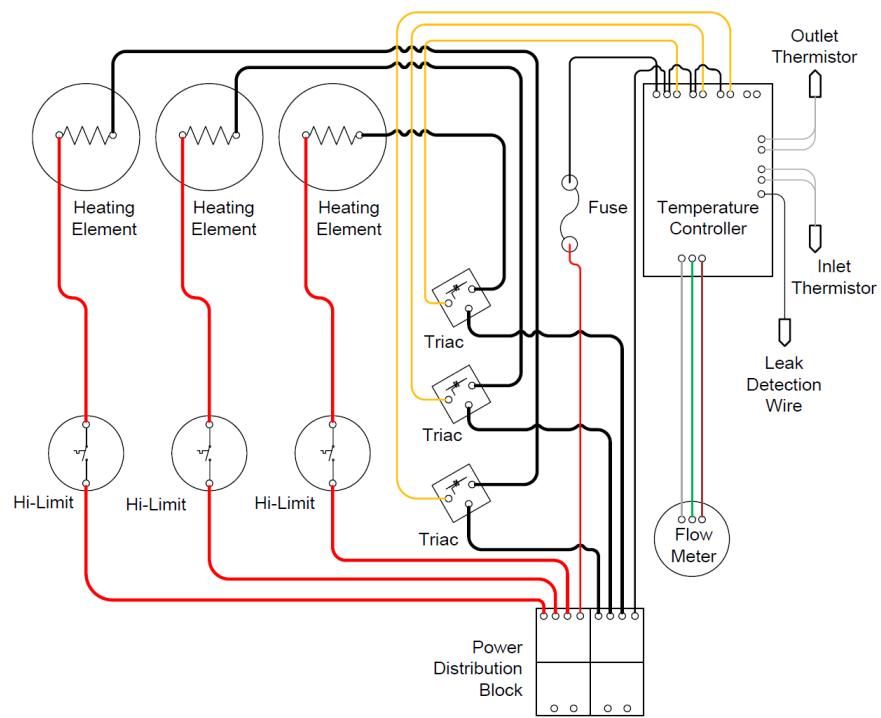


Tankless Wiring Diagram 3

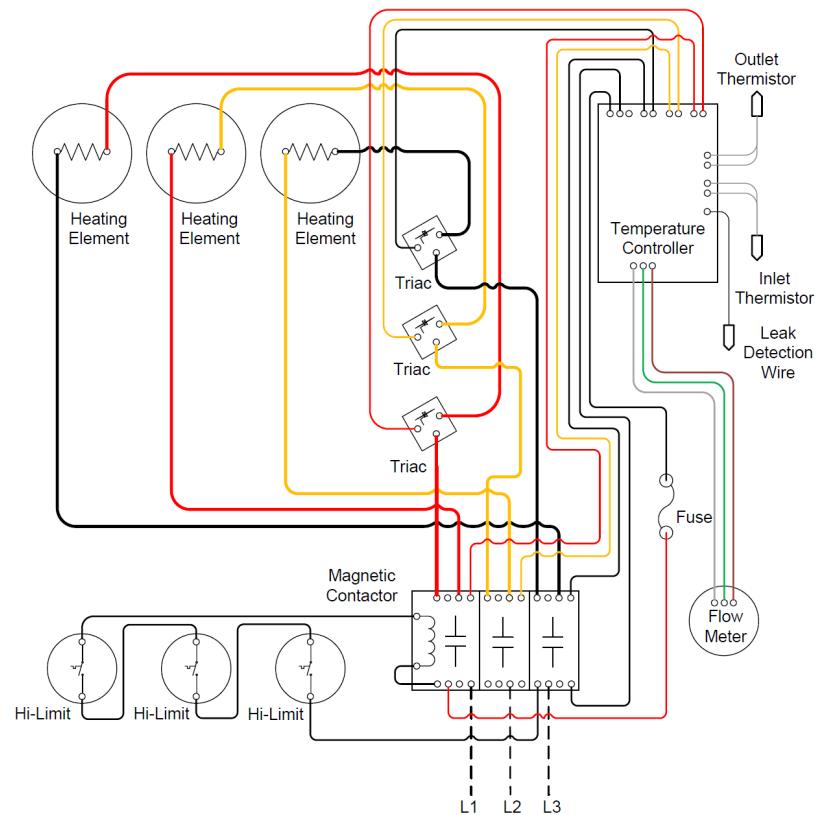


Tankless Wiring Diagram 4

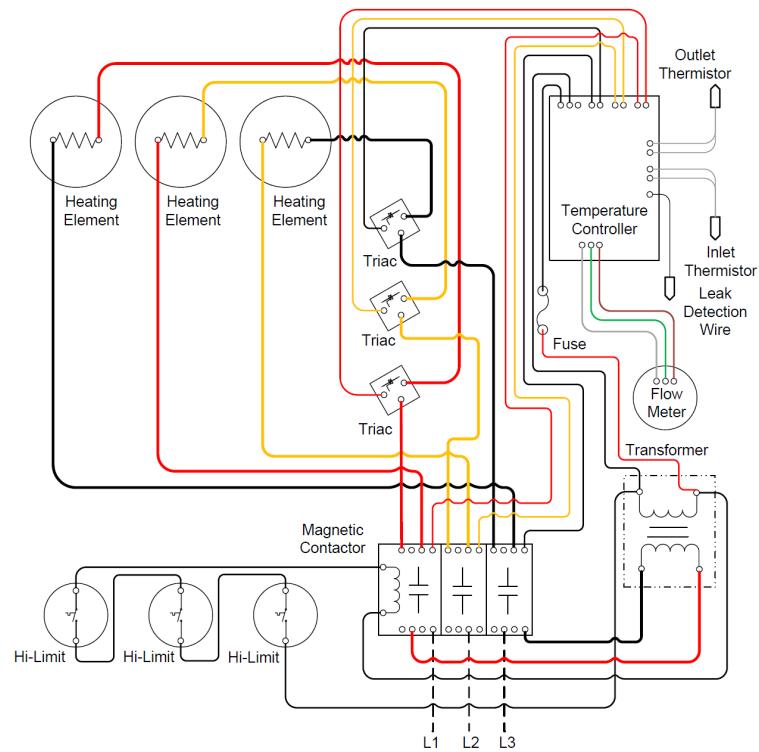


Tankless Wiring Diagram 5

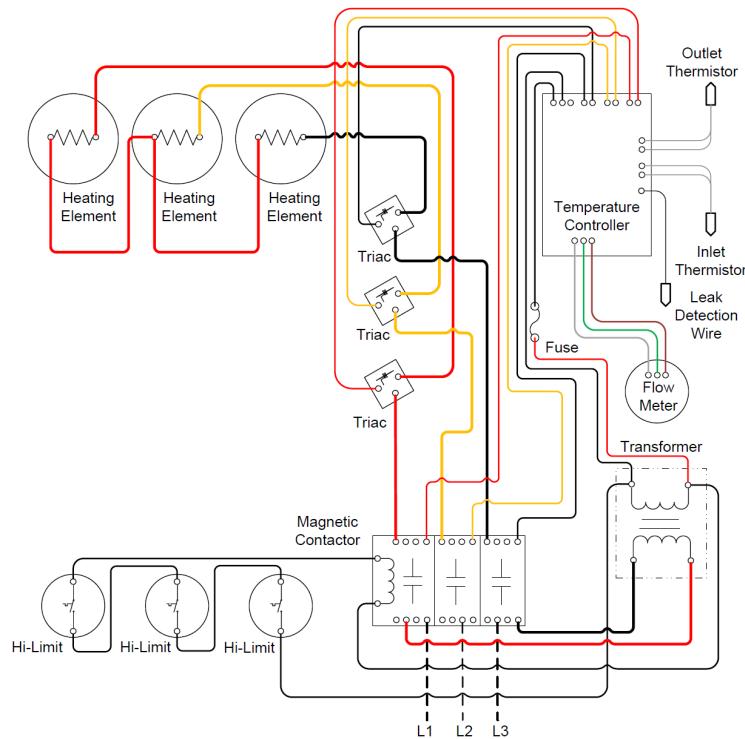


Tankless Wiring Diagram 6

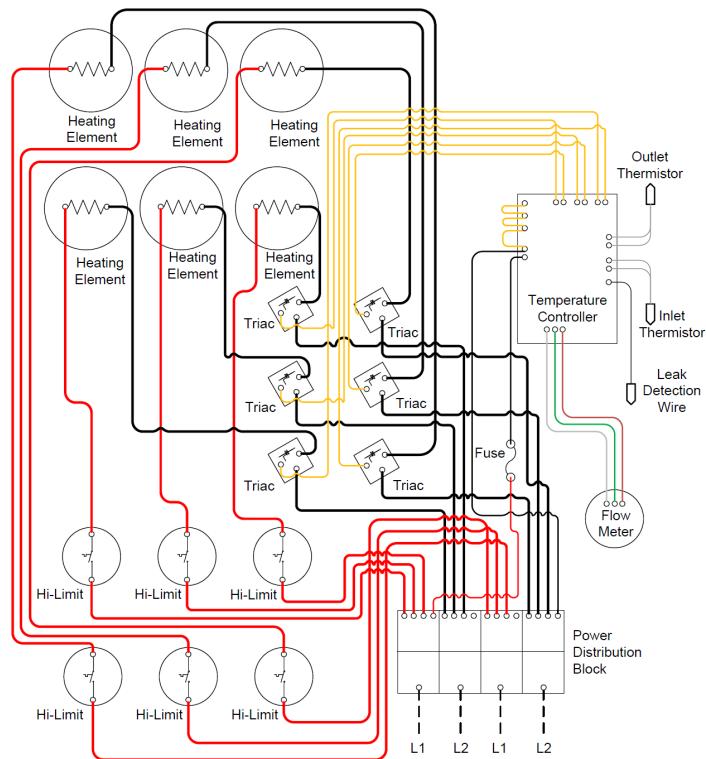


Tankless Wiring Diagram 7

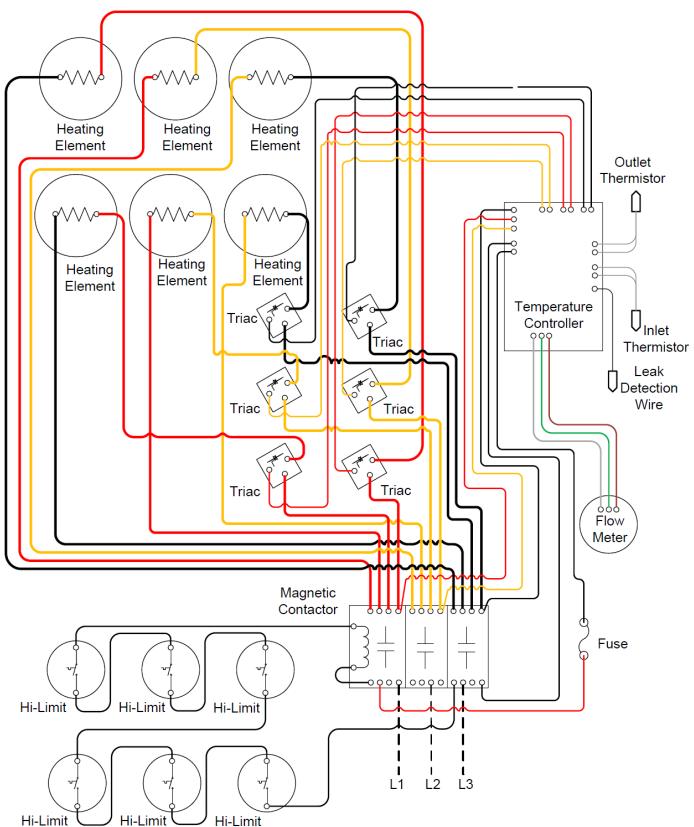


Tankless Wiring Diagram 8

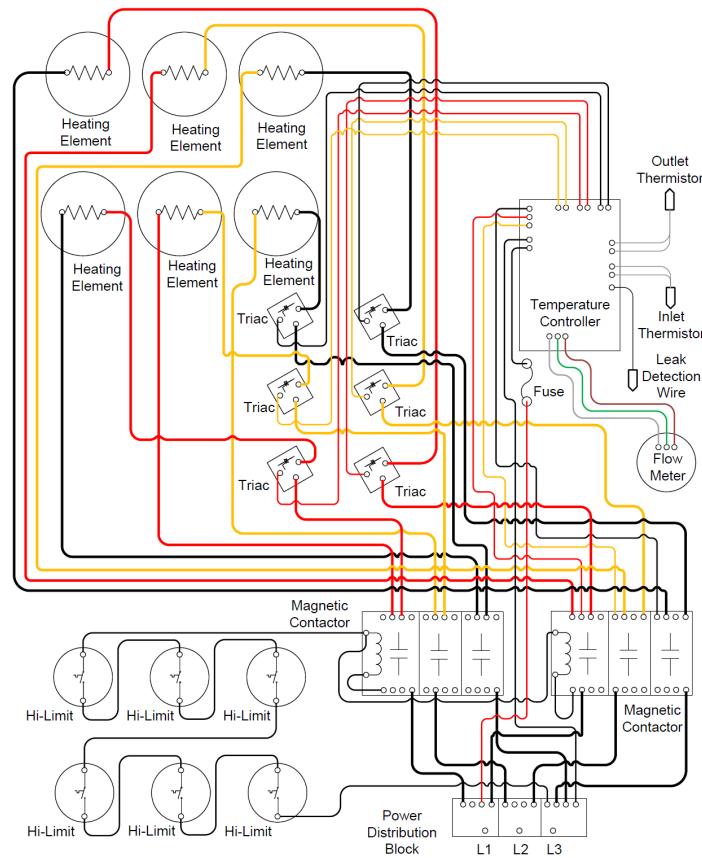


Tankless Wiring Diagram 9

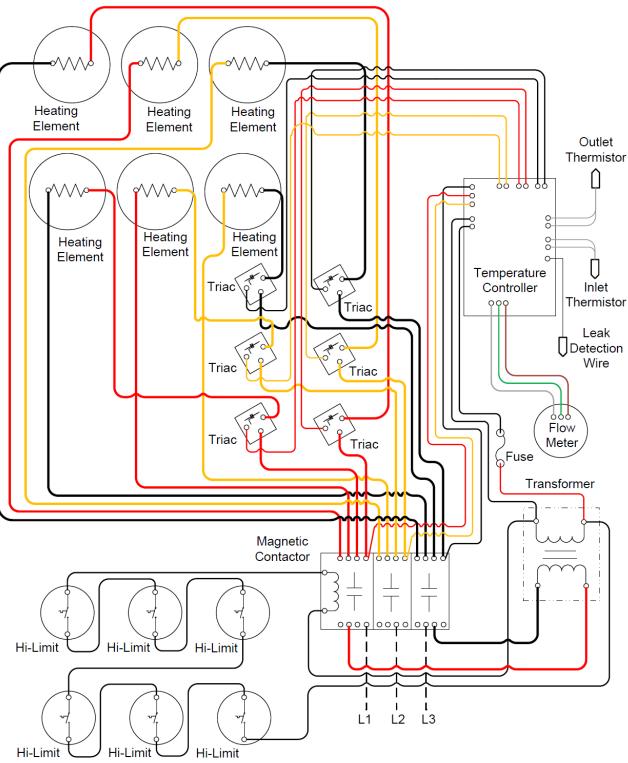

Tankless Wiring Diagram 10

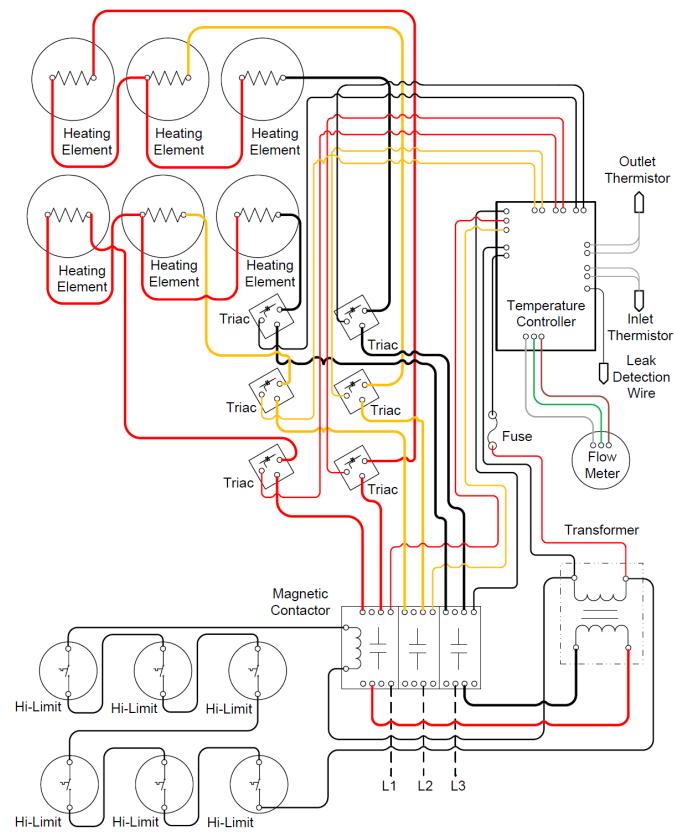

Tankless Wiring Diagram 12

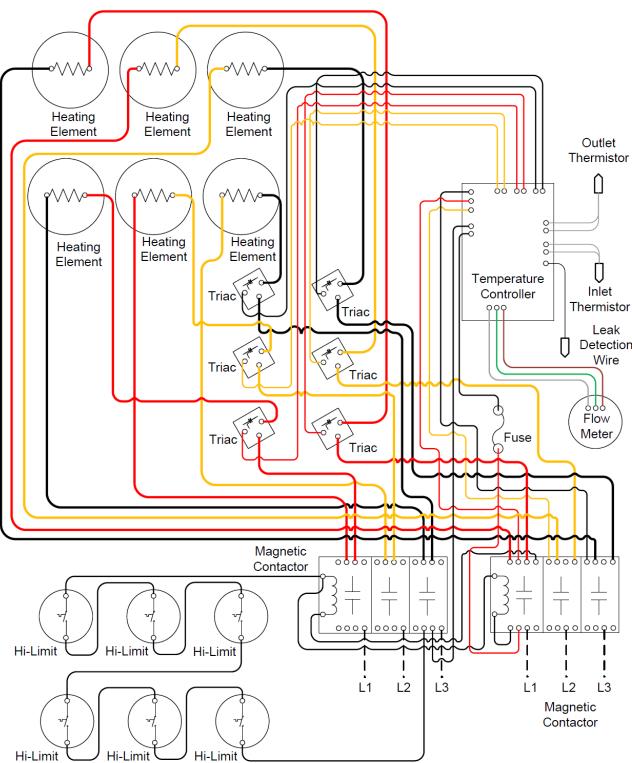

SECTION IV – OPERATION AND MAINTENANCE

First Use of your Hubbell Tankless Marine Water Heater:

Once the water supply is on and air has been purged from the system, power the unit on at the main panel. The unit is now operating automatically. When water flows through the unit, the heating elements turn on to heat the water to the displayed setpoint temperature. When the water flow stops, the heating elements turn off.

You can adjust the setpoint upward or downward by pressing the UP or DOWN button.

Displaying Celsius or Fahrenheit degrees and adjusting other settings for the tankless water heater can be done via the configuration menu, described below.



Maintenance:

- The Hubbell Tankless Marine Water Heater requires no maintenance other than to periodically check around the outside of the unit for leaks. If a water leak is detected from your water heater, turn off the water supply at the shut-off valve on the inlet side of the water heater, turn off the power to the heater at the main electrical panel and call a service technician or plumber for evaluation and repair.
- When any maintenance is performed on the water heater or the plumbing system that may introduce air into the water supply pipes, it is important to turn the power off to the water heater and purge the air out of the lines before restoring power to the unit. See [Checking for Leaks and Purging Air in Section III](#).


Temperature Controller User Interface Instructions:

1. To turn the unit OFF and ON:
 - a. To turn the unit OFF, press and hold the DOWN button until the display shows OFF.
 - b. To turn the unit ON, press and hold the UP button until the setpoint temperature is displayed.
 - c. Note that the display is always lit when power is applied to the unit.
 - d. Note that the controller will preserve all its settings during any power outage or disconnect.
2. To change setpoint temperature (the temperature is fully adjustable in 1° increments).
 - a. Press the UP or DOWN button to change the setpoint temperature.
 - b. Pressing and holding either the UP or DOWN button will fast scroll.
3. Configuration Menu.
 - a. To enter the configuration menu, press and hold the UP and DOWN buttons simultaneously for 7 seconds. (Note that the display will change during the time you are holding the buttons. You are in the configuration menu and can release the buttons when the first character of the display is 'P').
 - b. To scroll through menu items, press the UP or DOWN button.
 - c. To leave the configuration menu, wait 7 seconds without pushing any buttons.
 - d. To make a change to a specific configuration menu item, simultaneously press the UP and DOWN buttons. The menu item setting will now flash indicating it can be changed.

- e. To scroll through menu item settings, press the UP or DOWN key.
- f. When the desired setting is displayed, simultaneously press the UP and DOWN buttons to lock in the selection and return back to the configuration menu.
- g. Configuration Menu Items:

- i. Power Setting - Sets the total kW rating of water heater.
 - 1. P###, where ### is adjustable from 001 to 054 (Note that the kW selection should equal the kW based upon the actual voltage measured to the heater. Please see the nameplate on the front cover of the heater for a listing of kW ratings at various voltages).
- ii. Temperature Range – Sets the temperature adjustment range.
 - 1. r001, 60° to 140°F (15°-60°C) (Factory Default)
 - 2. r002, 32° to 194°F (0°-90°C)
 - 3. r003, 32° to 104°F (0°-40°C)
- iii. Display units – Sets the display units to either Fahrenheit/Gallons or Celsius/Liters.
 - 1. dEFF, for degrees Fahrenheit and Gallons. (Factory Default)
 - 2. dECC, for degrees Celsius and Liters.
- iv. Normal Display Mode– Sets the display to show various values.
 - 1. dSP1, to display setpoint temperature only. (Factory Default)
 - a. setpoint is displayed as ###
 - 2. dSP2, to display measured inlet temperature intermittently with setpoint temperature.
 - a. Inlet temperature is displayed as i###
 - 3. dSP3, to display measured outlet temperature intermittently with setpoint temperature.
 - a. Outlet temperature is displayed as o###
 - 4. dSP4, to display measured flow rate intermittently with setpoint temperature
 - a. Flow rate is displayed as F##.#, in tenths of a gallon or liter.
 - 5. dSP5, to display inlet temp, outlet temp, flow rate and setpoint all intermittently.
- v. Power Limiting Factor – Sets the % of heater output allowed by the controller.
 - 1. L###, where ### is a percentage from 001 to 100 (Factory Default 100).
 - This feature allows a user to limit the kW rating of the unit by a specific percentage and effectively lower the total amp draw of the unit.
- vi. Heater Configuration – Sets the controller to perform calculations based on the heater configuration of the unit.
 - 1. E001, for single-phase one heating element and all 3- phase units
 - 2. E002, for single-phase two heating elements
 - 3. E003, for single-phase three or six heating elements
 - 4. E004, for single-phase four heating elements
- vii. Calibration – Used to calibrate the heater. (For factory use only)
 - 1. CA #, where # equals the degrees of calibration from -3 to 3. Default is 0.
- viii. Low/High Flow – Sets the unit as either a low flow or high flow unit.
 - 1. LF, for low flow (Factory Default).
 - 2. HF, for high flow.
- ix. Remote Control – Sets the operation of the remote-control function (see Priority and Remote Controls in this section).
 - 1. iPOF, disables the remote control (Factory Default).

2. iPHi, 24VDC signal connected to P1 and P2 or closed relay connected to P2 and P3 will allow the heater to operate and loss of 24VDC signal or open relay connected to P2 and P3 will inhibit the heater operation.
3. iPLo, 24VDC signal connected to P1 and P2 or closed relay connected to P2 and P3 will inhibit the heater operation and loss of 24VDC signal or open relay connected to P2 and P3 will allow the heater to operate.
4. When the remote-control operation is inhibiting the unit from operating, the display will show hLd.

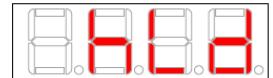

x. Display Lock – Allows the user to lock the heater parameters. When the display is locked the temperature setpoint cannot be changed and although the configuration menu will still be accessible, no changes can be made to any parameters, except to change the display lock. With the display lock on, attempting to change the temperature setpoint will cause the display to show, Locd.

1. LcOn, to turn the display lock on.
2. LcOf, to turn the display lock off (Factory Default).



xi. Software Version – Displays the version number of the software

1. Sd##, where ## is the version of the display software.
2. Sb##, where ## is the version of the main board software.

h. After this menu item, the configuration menu cycles back to the first item.


4. Diagnostic Menu Display

- a. To display common diagnostic data useful for troubleshooting, when in normal display mode press and release the UP and DOWN buttons simultaneously.
- b. The display will intermittently display the following values: flow rate (F##.#), measured inlet temp (i###), measured outlet temp (o###), setpoint (###).
- c. These values and settings will continue to display and scroll until either the UP or DOWN button is pressed. The display then returns to normal display mode.



5. Configuration Settings Display

- a. To display all configuration settings, when in normal display mode press and release the UP and DOWN buttons simultaneously twice.
- b. The display will scroll through all configuration settings.
- c. The display will continue to scroll until either the UP or DOWN button is pressed and will then return to normal display mode.

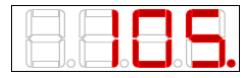

6. Power Rate Display

- a. The decimal point in the display's rightmost digit is a visual indicator of how much power is required to meet the demand. A blinking decimal point indicates that the triac is being sent a signal to energize and thus turn the element on. The decimal point light will blink at a faster rate as the controller is calling for more heat. When the unit is calling for full power the light is solid.
- b. If the amount of power required exceeds the capacity of the heater, then the entire display will intermittently flash. (Note that the display will only flash when the display configuration is set to 'dSP1'.)



7. Cost Calculator – Allows the user to view the amount of power and hot water consumed and the cost of operation.

- a. To display the Cost Calculator values, when in normal display mode press and release the UP and DOWN buttons simultaneously three times.
- b. The display will scroll through the Cost Calculator Values since last reset.
 - i. C###, where ## equals the total cost of operation.

- ii. #####, where ##### equals the total number of kW·Hrs consumed.
- iii. H0##, where ## equals water usage up to the ten thousandths place, followed by h##, where ## equals water usage up to the hundreds place. Example: H012, h345 equals 12,345 gallons of water used.
- iv. To reset these values to 0, press and hold the UP and DOWN buttons simultaneously for 5 seconds. When the display shows '0000', the cost calculator has been reset.

c. To enter a specific cost per kW·Hr value, while displaying the Cost Calculator values above press and release the UP and DOWN buttons simultaneously.

- i. The display shows the cost per kW·Hr as #.### (Factory Default 0.114)
- ii. Press the UP or DOWN button to adjust the cost per kW·Hr. Holding the UP or DOWN buttons will fast scroll.
- iii. Press the UP and DOWN buttons simultaneously to lock in the cost per kW·Hr.
- iv. Press the UP or DOWN button to return to Cost Calculator values.
- v. Press the UP or DOWN button to return to normal display mode.

8. Error Code

- a. Err1, indicates a failure of element #1
- b. Err2, indicates a failure of element #2
- c. Err3, indicates a failure of element #3
- d. Err4, indicates a failure of element #4
- e. Err5, indicates a failure of the inlet thermistor
- f. Err6, indicates a failure of the outlet thermistor
- g. Err7, indicates a failure of the display unit to communicate with the main board
- h. Err8, indicates that water has been detected in the case
- i. Err9, indicates failure of the flow meter



Remote Display

An optional remote display may be supplied and connected to the TK2000 control board as shown below.

Priority and Remote Controls:

Optionally, the tankless water heater may be connected to another electrical device (10A @240VAC max.) that will give priority to the water heater over that device to ensure that both do not operate at the same time and/or the tankless water heater may be wired to a remote switch, relay, or provided with a 24VDC signal (such as from a building maintenance system) to allow the tankless water heater to be remotely controlled. The diagram and description below provide details on how connections to the tankless water heater control board are to be made.


1. Priority Relay (10A@240VAC max.)

- a. When the unit is demanding power (calling for heat):
 - i. The connection between the terminals marked C and NO are closed and will allow power to pass through.
 - ii. The connection between the terminals marked C and NC are open and will not allow power to pass through.
- b. When the unit is not demanding power (not calling for heat):
 - i. The connection between the terminals marked C and NO are open and will not allow power to pass through.


ii. The connection between the terminals marked C and NC are closed and will allow power to pass through.

2. Remote Control


- a. When a 24VDC signal (5mA draw max.) is supplied between terminals P1 and P2, the heater will either operate or be inhibited (displayed as hLd) as determined by the Remote-Control settings as shown above. Loss of 24VDC signal has the opposite effect.
- b. When wired to a volt-free contact (10A max.) between terminal P2 and P3 (output signal 24VDC@5mA), opening or closing the contact will allow the heater to either operate or inhibit (displayed as hLd) operation as determined by the Remote-Control settings as shown above.

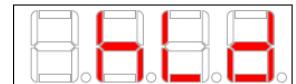

TK2000 Control Board Wiring Detail
Power and Triac Wiring

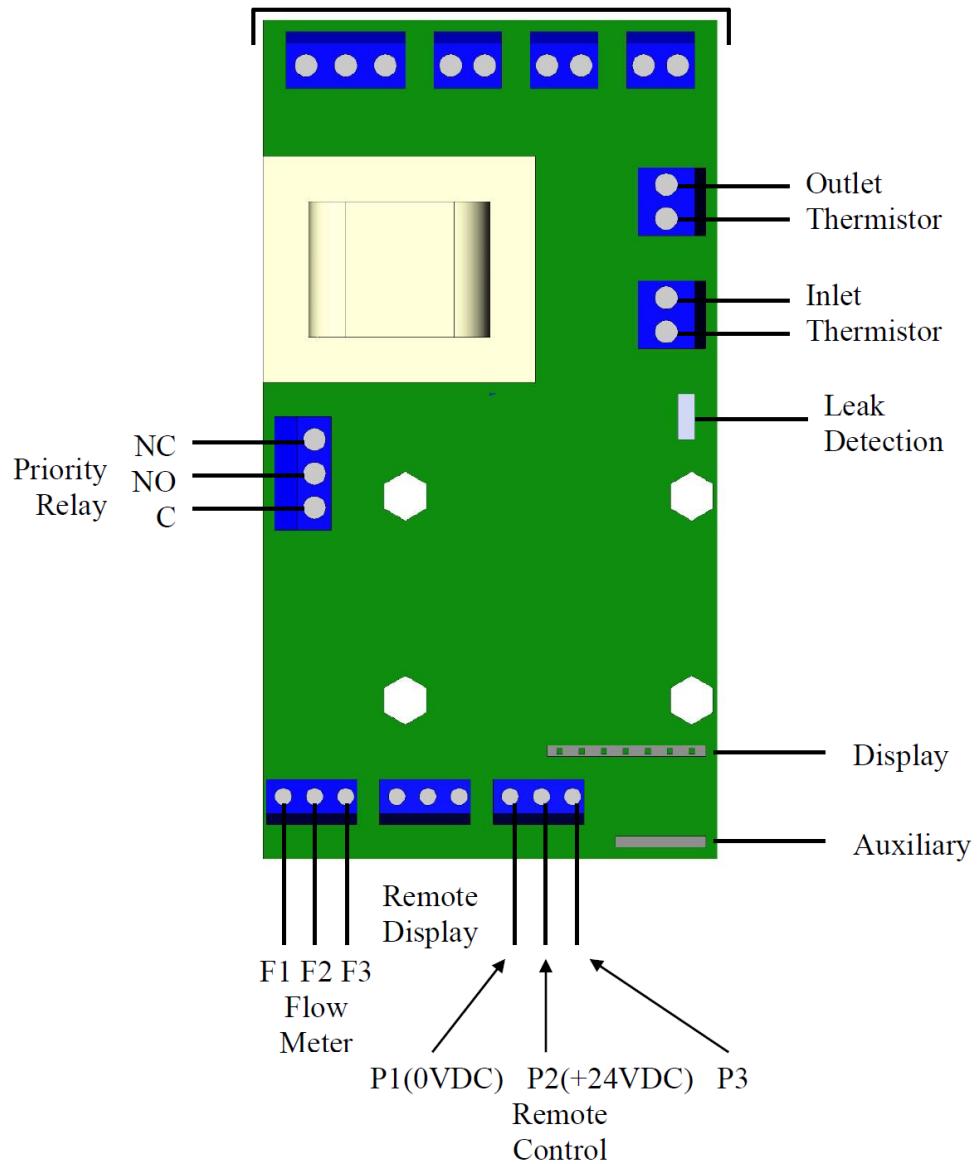


TK2250 Control Board Wiring Detail
Triac Wiring

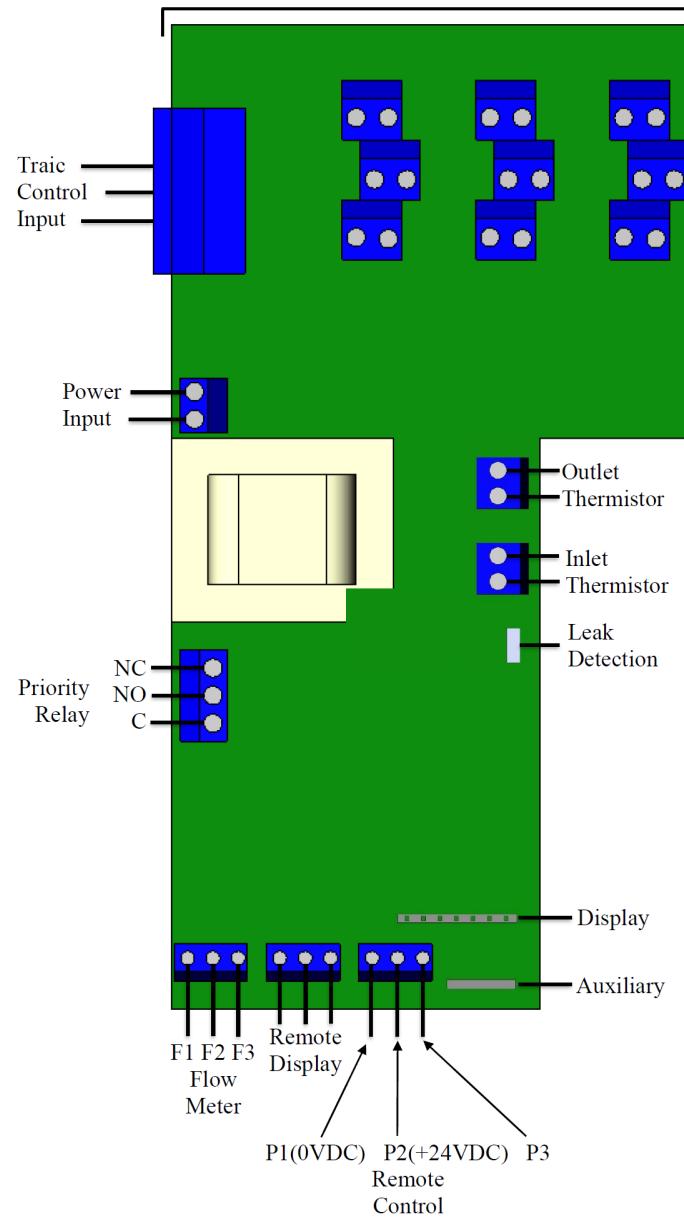

SECTION V – TROUBLESHOOTING

Initial Evaluation

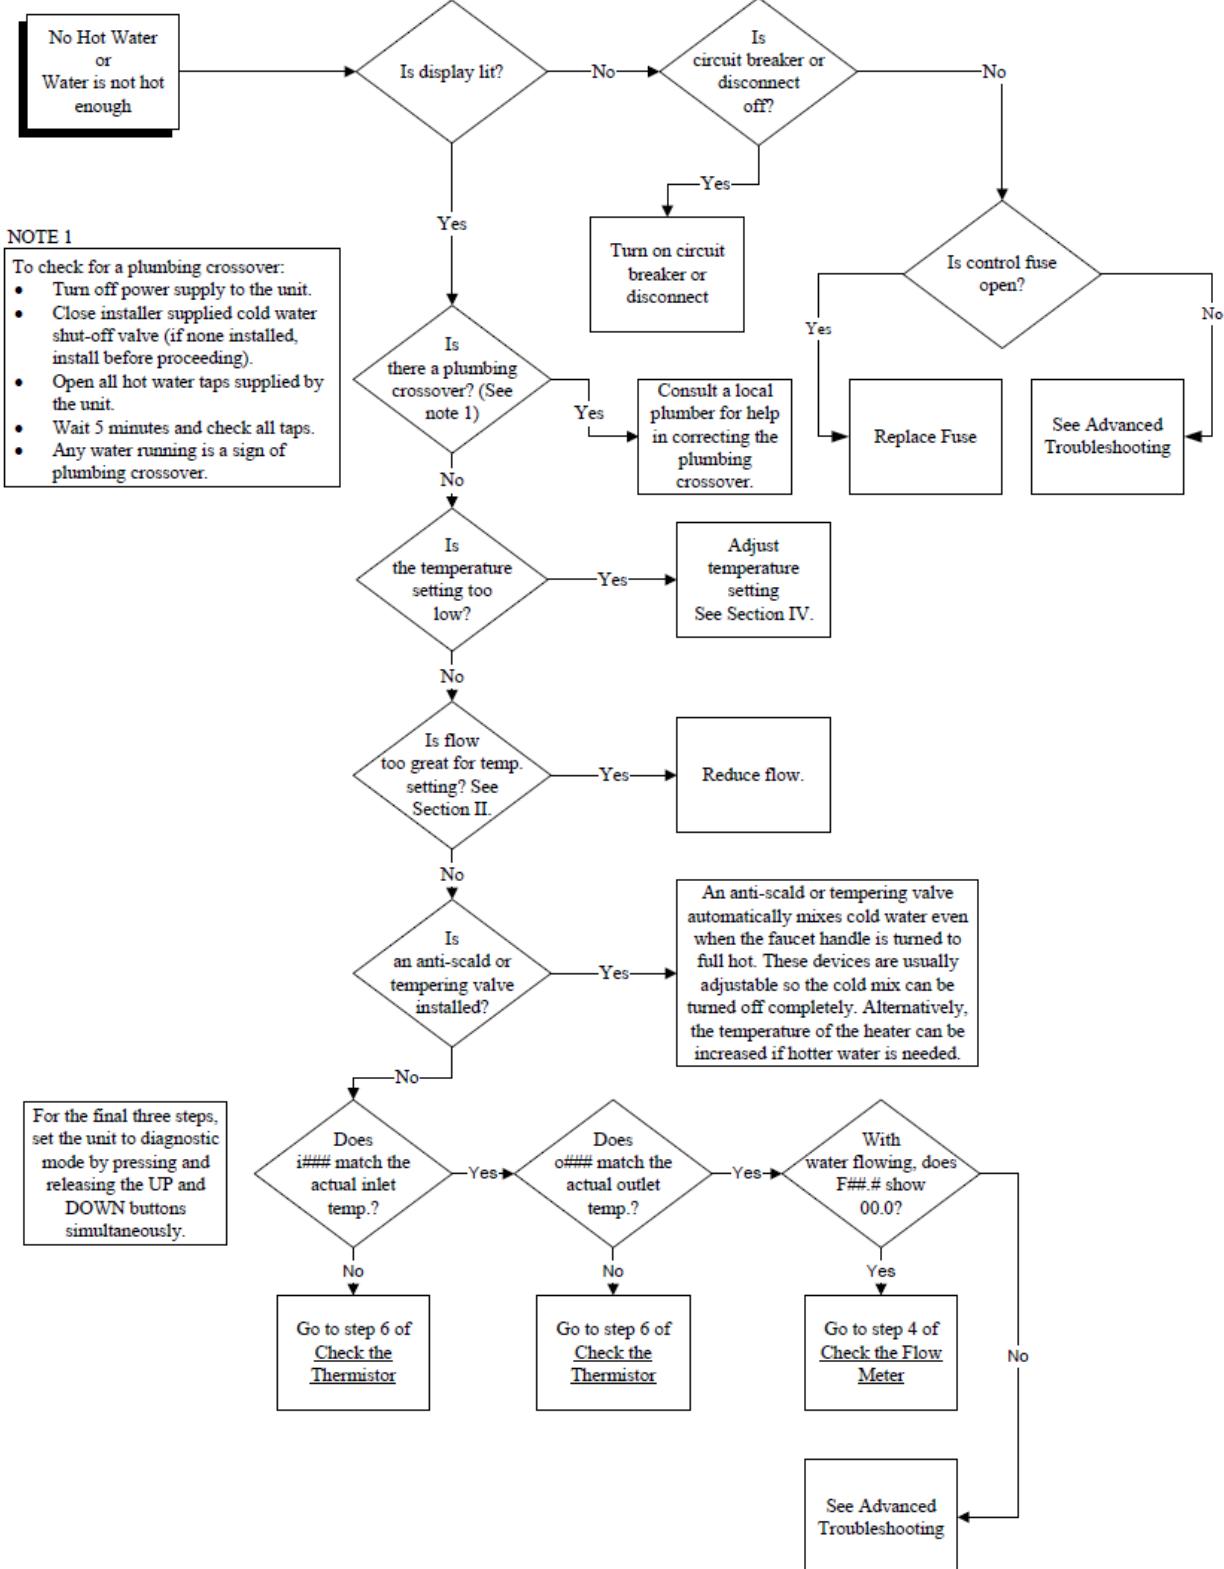

Advanced Troubleshooting:



WARNING: Serious bodily injury or death may occur if the following warnings are ignored.

- The following portion of this section is intended for use by a **QUALIFIED ELECTRICIAN**.
- All circuit breakers must be turned off at the main panel before the cover of the unit is removed.

This troubleshooting section will cover all the points that need to be checked from an electrical standpoint to ensure that the Hubbell tankless water heater is working correctly and to determine which component may need to be replaced.

Tools Required:

- Phillips screwdriver
- Clamp multi-meter able to read voltage and amperage (amperage readings require a clamp type meter).
- Thermometer

Pre-Operational Procedures:

1. With power to the unit turned ON, verify that the configuration settings are correct in accordance with the [Temperature Controller User Interface Instructions in Section IV](#).
2. TURN OFF POWER AT THE MAIN PANEL.
3. Remove the cover by unscrewing the screws located on all sides of the unit.
4. Verify that the main power feed is properly connected to the power distribution block or magnetic contactor, as applicable.
5. Verify all connections are tight.

Check the Power Supply to the Unit:

1. Turn on the power to the unit from the main panel.
2. Check the incoming voltage between each phase at the line side of the power distribution block or magnetic contactor, as applicable.
3. If no voltage is present between all phases, verify that the breakers or disconnect on the main panel have been turned on.
4. If the breakers are on and there is still no voltage present or if the incorrect voltage or no voltage is present between any two phases, contact an electrician to troubleshoot the feed.
5. If all voltage readings are acceptable, proceed to [Check the Transformer](#).

Check the Transformer:



1. The transformer is utilized on units with supply voltages above 240 volts to supply a reduced voltage capable of powering the temperature controller.
2. If the display is lit or the unit is not equipped with a transformer (208- and 240-volt units), proceed to [Check the Hi-Limit Thermostats](#).
3. Check the voltage on the primary side of the transformer.
4. If there is no voltage present, check the wiring and connections to the primary side of the transformer from the power distribution block or magnetic contactor, as applicable.
5. Check the voltage on the secondary side of the transformer.
6. If the secondary voltage does not conform to the table below, replace the transformer.
7. If all voltage readings are acceptable, proceed to [Check the Hi-Limit Thermostats](#).

| Primary Voltage | Secondary Voltage ($\pm 5\%$) |
|-----------------|---------------------------------|
| 380 | 207 |
| 415 | 221 |
| 440 | 214 |
| 480 | 234 |
| 575 | 206 |
| 600 | 215 |

Note: The secondary voltage listed in the transformer is based on the transformer being used at full capacity. Because there is essentially “no load” on the transformer, the secondary voltage will be higher than the voltage listed on the transformer. This “regulation” varies from 8.4% to 12% depending on the primary voltage and the transformer used.

Check the Hi-Limit Thermostats:

1. The unit is supplied with safety hi-limit thermostats mounted on the plate that holds the heating chamber in place. In single phase units with no magnetic contactor, these thermostats allow the power from one phase of the terminal block to flow to the heating element. If the hi-limit thermostat fails, it will not supply the heating element with power and therefore the heating element will not turn on and produce heat. In three-phase units or any unit with a magnetic contactor, the thermostats are wired in series to a magnetic contactor coil. If any hi-limit thermostat fails, it will not supply power to the contactor coil and therefore no power will be supplied to any heating elements.
2. For single-phase units, check the voltage between the left-hand metal connection point of the thermostat and the metal plate. If shrink-wrap is present around the metal connection point to the hi-limit thermostat, cut back the shrink-wrap with a knife to expose the metal connection. A voltage reading around 120V should be indicated since this component is being fed by one leg of the electrical power coming off the terminal block. Perform this step on the left-hand connection of each hi-limit thermostat then again on the right-hand connection of each hi-limit thermostat.

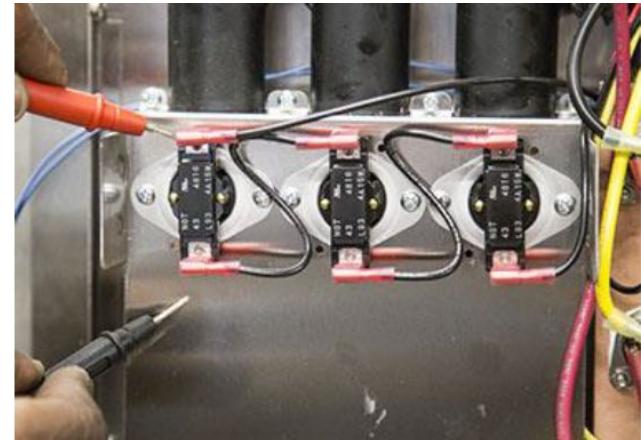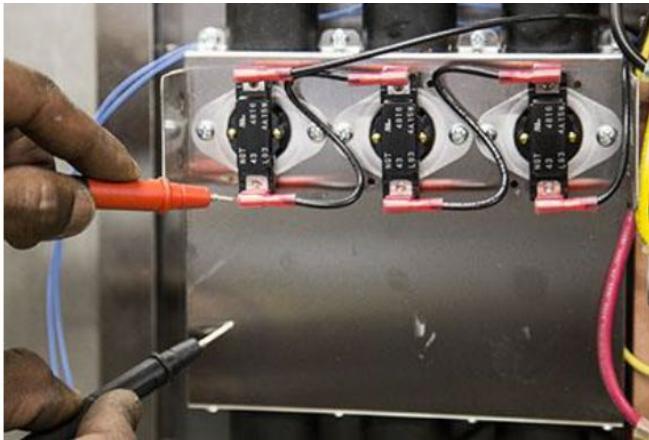


3. If there is no voltage at the bottom of any hi-limit thermostat, then check the wiring and connections between that hi-limit thermostat and the power distribution block.
4. If correct voltage is present at the bottom of the hi-limit thermostat but no voltage is present at the top of the thermostat, then that hi-limit thermostat needs to be replaced.
5. If correct voltage is present on the top and bottom continue to Check the Thermistor.


6. For three-phase units, if the magnetic contactor is pulled in, continue to Check the Thermistor. Otherwise, starting at the left-hand connection of the lowest hi-limit thermostat, check the voltage between the metal connection point of the thermostat and the metal plate.
7. A voltage reading around 120V should be indicated. If no voltage is present at this point, check the wiring and connections to this hi-limit thermostat from the magnetic contactor or transformer, as applicable.
8. If correct voltage is present, check the voltage at the right-hand side of the thermostat, then the left-hand side of the thermostat above and continue this pattern to the uppermost thermostat.
9. If at any point there is voltage on the left-hand side and there is no voltage on the right-hand side of the same thermostat, replace that hi-limit thermostat.
10. If at any point there is voltage on the right-hand side of a thermostat and there is no voltage on the left-hand side of the thermostat above it, check the wiring and connections.
11. If all voltage readings are good and the contactor is not pulled in, check the wiring and connections between the right-hand side of the uppermost thermostat and the magnetic contactor coil.
12. If the wiring and connections are good, replace the magnetic contactor.

Check the Thermistor:

1. The thermistor is a temperature sensing device that changes resistance with changes in temperature. It is designed to register 150,000Ω at 77°F (25°C).
2. Set the unit to diagnostic mode by pressing and releasing the UP and DOWN buttons simultaneously.
3. With a thermometer, measure the temperature of the cold water and hot water at a fixture.
4. Compare the displayed inlet temperature (i###) to the measured cold-water temperature and the displayed outlet temperature (o###) to the measured hot water temperature. If either of these readings is significantly different, continue with the next step. Otherwise, proceed to Check the Flow Meter.
5. On the right-hand side of the temperature controller are two terminal blocks. Disconnect the wires from the uppermost terminal block (outlet thermistor). Using the multi-meter probes with the setting at OHMS or Ω , place one probe on the end of one wire and the other probe on the end of the other wire. An Ohms reading consistent with the thermistor chart on the following page for the approximate temperature of the water should be indicated. NOTE: Alligator clips should be used. Holding the wires in your hands will give a false reading. Reconnect the wires.

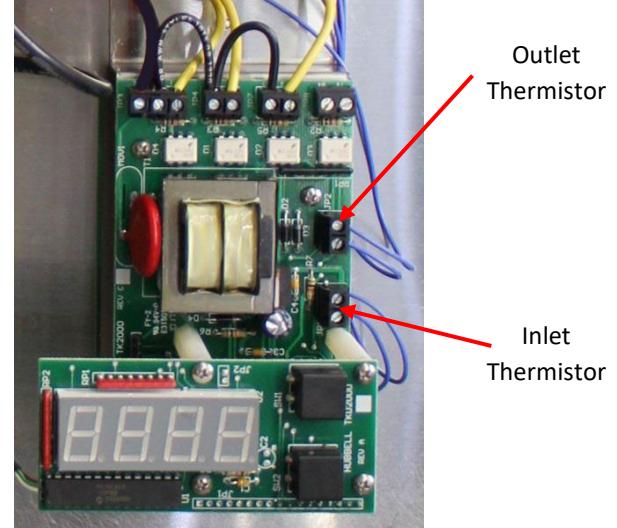

Thermistor Chart (150,000Ω @ 77°F (25°C))

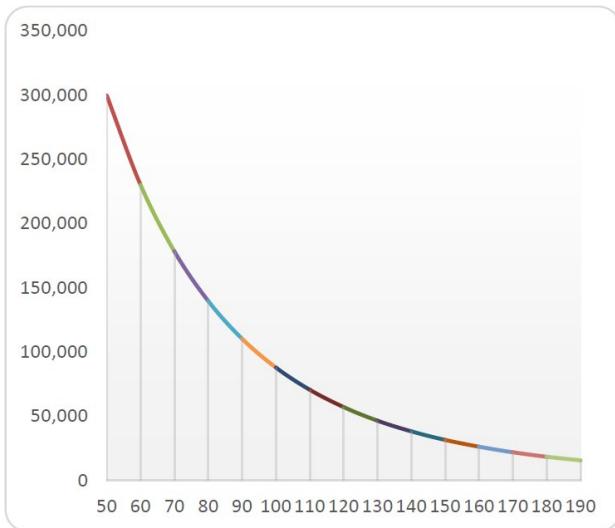

| Temperature, °F (°C) | Ohms, Ω |
|----------------------|---------|
| 50 (10.0) | 299,516 |
| 60 (15.6) | 229,905 |
| 70 (21.1) | 178,244 |
| 80 (26.7) | 139,501 |
| 90 (32.2) | 110,157 |
| 100 (37.8) | 87,723 |
| 110 (43.3) | 70,418 |
| 120 (48.9) | 56,957 |
| 130 (54.4) | 46,402 |
| 140 (60.0) | 38,062 |
| 150 (65.6) | 31,425 |
| 160 (71.1) | 26,106 |
| 170 (76.7) | 21,816 |
| 180 (82.2) | 18,333 |
| 190 (87.8) | 15,489 |

6. Repeat the above step with the lower terminal block (inlet thermistor).
7. If either of these readings is not consistent with the chart (within ±10,000Ω), replace that thermistor.
8. If all Ohms readings are acceptable, proceed to Check the Flow Meter.

Check the Flow Meter:

1. Set the unit to diagnostic mode by pressing and releasing the UP and DOWN buttons simultaneously.
2. Turn on a hot water tap at a fixture that will ensure a good flow rate through the unit.
3. If the flow rate on the display reads 'F00.0' then continue with the next step. Otherwise, proceed to Check the Temperature Controller.
4. Verify that the wiring from the flow switch is connected to the control board in the order **WHITE/GREEN/BROWN** from left to right.
5. With no flow on the unit, using the multi-meter probes with the setting at Volts – Direct Current, place one probe on the terminal block where the **WHITE** wire is connected (F1) and the other probe where the **BROWN** wire is connected (F3). A voltage reading in the appropriate range (9V) should be indicated.
6. If the voltage reading is not in the appropriate range (9V), replace the temperature controller.
7. Turn on a hot water tap at a fixture that will ensure a good flow rate through the unit and using the multi-meter probes with the setting at Volts – Direct Current, place one probe on the terminal block where the **WHITE** wire is connected (F1) and the other probe where the **GREEN** wire is connected (F2). A voltage reading in the appropriate range (4.5V) should be indicated.
8. If the voltage reading is not in the appropriate range (4.5V), replace the flow meter.
9. If all voltage readings are acceptable, proceed to Check the Temperature Controller.

Check the Temperature Controller:

1. At the top of the temperature controller there are 4 sets of terminal blocks. Verify the wiring is correct as indicated in the wiring diagram specific to the model.
2. Check the voltage between the terminal block where the **BLACK** wire is connected (this will be the leftmost terminal) and the metal heater chamber cover. A voltage reading in the appropriate range (120V) should be indicated.

3. If no voltage is present, verify that the **BLACK** wire in the terminal block is properly tightened and verify that the opposite end, this will be a **RED** wire, is properly connected to the power distribution block, magnetic contactor, or transformer, as applicable.
4. Check the voltage between the terminal block where the **BLACK** wire is connected at the second terminal from the left and the metal heating chamber cover. A voltage reading in the appropriate range (120V) should be indicated. Repeat this step for each of the wires connected to the terminal blocks.
5. If no voltage is present, verify that the **BLACK** wire in the terminal block is properly tightened and verify that the opposite end, this will be a **RED** wire, is properly connected to the power distribution block, magnetic contactor, or transformer, as applicable.
6. If voltage is present where the black wires connect to the terminals and there is no display, replace the temperature controller.
7. Check the voltage between each additional wire from left to right and the metal heating chamber cover. A voltage reading in the appropriate range (one half of the incoming power voltage, i.e., if the incoming power is 480V, then the reading should be 240V) should be indicated.
8. If no voltage is present, verify that the **BLACK** wires in the terminal block are properly tightened and verify that the opposite ends of the **BLACK** wires are properly jumpered to the previous **BLACK** wire connection terminal or properly connected the magnetic contactor, as applicable.
9. Turn on a hot water tap at a fixture that will ensure a good flow rate through the unit and set the temperature to the highest setting, so the unit calls for full power.
10. Check the voltage between the terminal block where the first **YELLOW** wire is connected from left to right and the metal heating chamber cover. A voltage reading in the appropriate range (one half of the incoming power voltage, i.e., if the incoming power is 480V, then the reading should be 240V) should be indicated. Repeat this step for each of the **YELLOW** wires.
11. If no voltage is present on any one of the **YELLOW** wires, replace the temperature controller.
12. If all voltage readings are acceptable, proceed to [Check the Triacs \(Step 1\)](#).

[Check the Triacs \(Step 1\)](#):

1. The triacs are the switching mechanism for turning the heating elements on and off.
2. Turn on a hot water tap at a fixture that will ensure a good flow rate through the unit and set the temperature at the highest setting so the unit calls for full power.
3. Check the voltage between the two wires that are connected to the top of the heating element. A voltage reading in the appropriate range (equal to the incoming line voltage) should be indicated.
4. If no voltage is present on any heating element, the triac connected to that element should be replaced.
5. If all voltage readings are acceptable, proceed to [Check the Heating Elements](#).



Check the Heating Elements:

1. To check the heating element the amperage draw from each heating element must be verified. To do this the unit must be operating.
2. Turn on a hot water tap at a fixture that will ensure a good flow rate through the unit and set the temperature at the highest setting.
3. Using a clamp-on multi-meter, clamp the meter around one of the **RED** wires going to the lowest heating element. The reading should be as indicated ($\pm 5\%$) based on the specific model listed in the Electrical Specification table in the Installation section.
4. Repeat for all the heating elements.
5. If any amp reading is not within the range as indicated in the chart, that heating element should be replaced.
6. If all readings are within range continue to [Check the Triacs \(Step 2\)](#).



Check the Triacs (Step 2):

1. Turn off the flow of hot water.
2. Using a clamp-on multi-meter, clamp the meter around one of the **RED** wires going to the lowest heating element (same as in step 3 of [Check the Heating Elements](#)). The reading should be zero. Repeat for all the heating elements.
3. If any reading is not zero with the hot water turned off, then that triac should be replaced.

Contact the Factory:

4. If you were unable to determine the problem from the above troubleshooting, please have the electrician contact the factory.

SECTION VI – SERVICING AND REPLACEMENT OF PARTS



WARNING: Serious bodily injury or death may occur if the following warnings are ignored.


- The following portion of this section is intended for use by a **QUALIFIED ELECTRICIAN OR PLUMBER**.
- All circuit breakers must be turned off at the main panel before the cover of the unit is removed.
- When any maintenance is performed on the water heater that may introduce air into the unit, it is important to purge the air out of the lines before allowing the unit to power up. See Checking for Leaks and Purging Air in Section III.

Heating Element:

1. Disconnect power.
2. Shut off cold water inlet and hot water outlet valves.
3. Drain unit.
4. Remove cover.
5. Disconnect the **RED** power leads from the top of the element to be replaced.
6. Unscrew the element from the heating chamber coupling.
7. Install the replacement heating element by screwing it into the heating chamber coupling.


NOTE: Verify that the O-ring is installed onto the heating element prior to installation.

8. Re-connect the power leads to the element terminals.
9. Re-install cover.
10. Open the cold-water inlet and hot water outlet valves.
11. Bleed air from the unit. See Checking for Leaks and Purging Air in Section III.
12. Turn the power on.

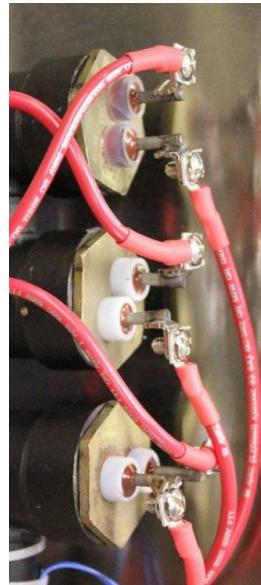

Hi-Limit Switch:

1. Disconnect power.
2. Remove cover.
3. For single-phase models, disconnect the leads from the heating element and power distribution block that connect to the hi-limit switch to be replaced. For three-phase units, disconnect the wires from the hi-limit switch to be replaced. NOTE: The replacement hi-limit switch comes with power leads attached. For single-phase units, power leads should not be disconnected from the hi-limit switch. For three-phase units, disconnect the attached power leads on the replacement piece.
4. Remove the two (2) screws securing the hi-limit switch to the heating chamber cover.
5. Remove the hi-limit switch.
6. Spread a pea sized amount of the conductive thermal paste included with the replacement kit on the back of the hi-limit switch (the portion to be installed against the heating chamber tube).
7. Install the hi-limit switch to the heating chamber cover with the two (2) screws previously removed.
8. For single-phase units, connect the supplied power leads to the heating element and the power distribution block. For three-phase units, connect the wires previously disconnected in the prior step.
9. Re-install cover.
10. Turn the power on.

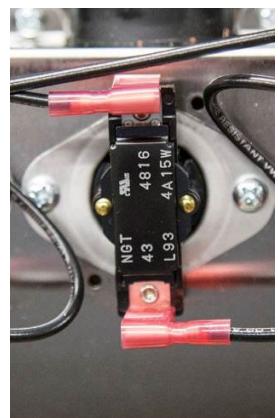

Inlet Thermistor:

1. Disconnect power.
2. Remove cover.
3. Disconnect inlet thermistor wires from the controller.
4. Cut the tie-wrap securing the inlet thermistor to the inlet pipe and remove the inlet thermistor.
5. Spread a pea sized amount of the conductive thermal paste included with the replacement kit on the inlet pipe where the replacement inlet thermistor is to be installed.
6. Secure the inlet thermistor to the inlet pipe with a new tie-wrap.
7. Connect the inlet thermistor wires to the controller.
8. Re-install cover.
9. Turn the power on.




Inlet Thermistor

Outlet Thermistor:

1. Disconnect power.
2. Remove cover.
3. Disconnect outlet thermistor wires from the controller.
4. Cut the tie-wrap securing the outlet thermistor insulation.
NOTE: Save the insulation to cover the replacement outlet thermistor.
5. Remove the aluminum tape securing the outlet thermistor and remove the outlet thermistor.
6. Spread a pea sized amount of the conductive thermal paste included with the replacement kit on the outlet pipe where the replacement outlet thermistor is to be installed.
7. Secure the outlet thermistor to the outlet pipe with a new piece of aluminum tape.
8. Position the outlet thermistor such that the wires are facing towards the top.
9. Secure the outlet thermistor insulation around the outlet thermistor with a new tie-wrap.
10. Connect the outlet thermistor wires to the controller.
11. Re-install cover.
12. Turn the power on.

Temperature Controller

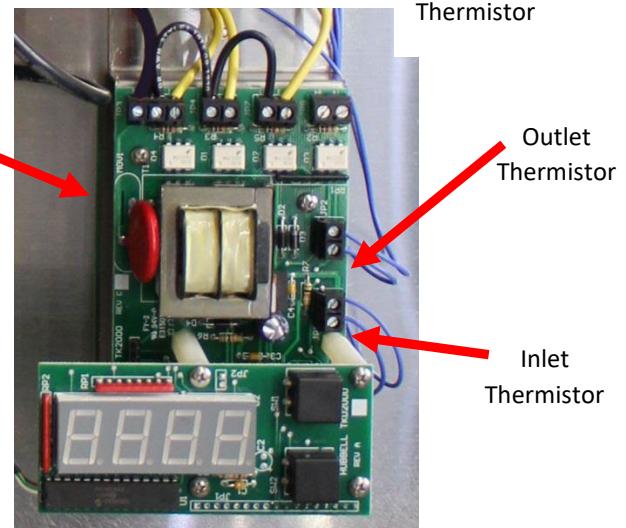


Outlet Thermistor

Inlet Thermistor

Temperature Controller:

1. Disconnect power.
2. Remove cover.
3. Mark the wires going to the controller so they can be re-connected in the same places upon replacement.
4. Disconnect all the wires from the controller.

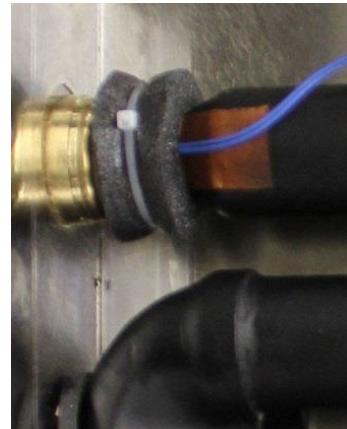

NOTE: The display may need to be removed to access the wires from the flow meter. The display can be removed by removing the four (4) screws securing the display to the controller standoffs and then pulling the display from the socket.

5. Remove the two (2) screws securing the temperature controller to the controller stand.
6. Install the replacement controller with the two (2) screws removed in the last step.


7. Re-connect the wires to the temperature controller in the same locations they were previously disconnected from.
8. Re-install cover.
9. Turn the power on.

Triac:

1. Disconnect power.
2. Remove cover.
3. Disconnect the wire from the heating element, the wire from the power distribution block or magnetic contactor (as applicable), and the wire from the controller for the triac to be replaced.

NOTE: Replacement triacs come with replacement wires attached.

4. Remove the two (2) nuts securing the triac to the heatsink and remove the triac.
5. Spread a pea sized amount of the conductive thermal paste included with the replacement kit on the back of the triac to be installed.
6. Install the replacement triac to the heatsink with the two (2) nuts removed previously.
7. Connect the **RED** wire to the heating element, the **BLACK** wire to the power distribution block or magnetic contactor (as applicable), and the **YELLOW** wire to the controller.
8. Re-install cover.
9. Turn the power on.

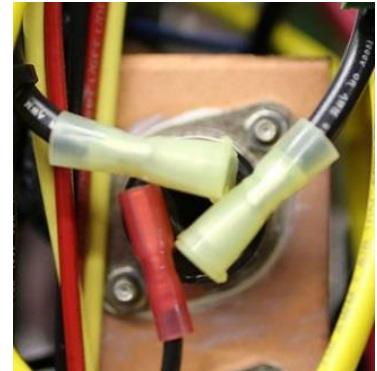

Flow Meter:

1. Disconnect power.
2. Shut off cold-water inlet and hot water outlet valves.
3. Drain unit.
4. Remove cover.
5. Disconnect the flow meter wires from the controller.

NOTE: The display may need to be removed to access the wires from the flow meter. The display can be removed by removing the four (4) screws securing the display to the controller standoffs and then pulling the display from the socket.

6. Disconnect the cold-water supply pipe from the union fitting.
7. Unscrew the union connection and coupling assembly from the flow meter.
8. Unscrew the flow meter from the inlet pipe.
9. Screw the replacement flow meter into the inlet pipe.

NOTE: Pipe dope must be used to seal the connection.

NOTE: When installing flow meter make sure arrow is pointing in the direction of the water flow (towards triac plate).

10. Screw the union connector and coupling assembly into the replacement flow meter.


NOTE: Pipe dope must be used to seal the connection

11. Re-connect the cold-water inlet piping to the union connector.
12. Connect the flow meter wires to the controller. From left to right, **WHITE** / **GREEN** / **BROWN**.
13. Re-install cover.
14. Open the cold-water inlet and hot water outlet valves.
15. Bleed air from the unit. See [Checking for Leaks and Purging Air in Section III.](#)
16. Turn the power on.



Magnetic Contactor:

1. Disconnect power.
2. Remove cover.
3. Mark the wires going to the magnetic contactor so they can be re-connected in the same places upon replacement.
4. Disconnect all the wires from the magnetic contactor.
5. Remove the two (2) screws securing the magnetic contactor to the base.
6. Install the replacement magnetic contactor with the two (2) screws removed in the last step.
7. Re-connect the wires to the magnetic contactor in the same locations they were previously disconnected from.
8. Re-install cover.
9. Turn the power on.

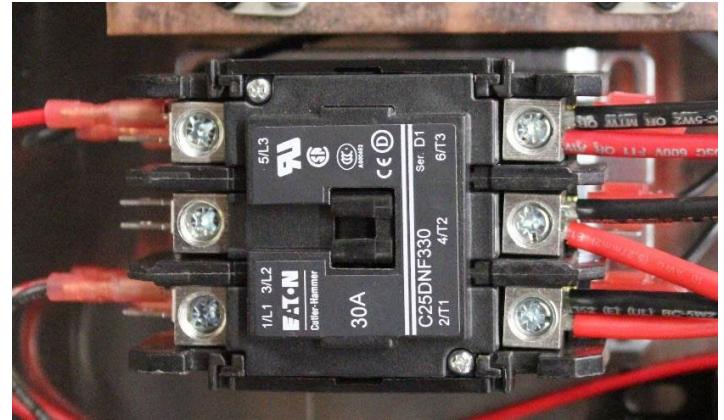


Transformer:

1. Disconnect power.
2. Remove cover.
3. Mark the wires going to the transformer so they can be re-connected in the same places upon replacement.
4. Disconnect all the wires from the transformer.
5. Remove the two (2) screws securing the transformer to the base.
6. Install the replacement transformer with the two (2) screws removed in the last step.
7. Re-connect the wires to the transformer in the same locations they were previously disconnected from.
8. Re-install cover.
9. Turn the power on.



Control Fuse:

1. Disconnect power.
2. Remove cover.
3. Twist fuse and pull from fuse holder.
4. Insert new fuse in holder and twist to lock in place.
5. Reinstall cover.
6. Turn the power off.

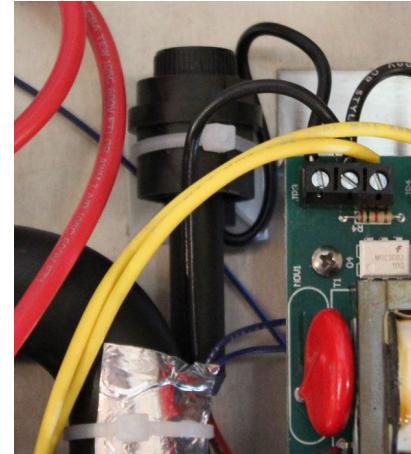

SECTION VII – PARTS LIST

| Category | Description | Hubbell P/N |
|---------------------------|---|---------------------|
| Plumbing | Dielectric Union- 3/4" Sweat x 3/4"FNPT | DE UNIONBR .75 |
| | Dielectric Union- 1" Sweat x 1"FNPT | DIELECTRIC UNION 1" |
| | Heating Chamber: 3 Element, Low Flow | TK3-FM |
| | Heating Chamber: 3 Element, High Flow | TK3-FMHF |
| | Heating Chamber: 6 Element, Low Flow | TK6-FM |
| | Heating Chamber: 6 Element, High Flow | TK6-FMHF |
| | Filter Screen for Inlet | SCREEN TK |
| Elements (with O-ring) | 4500 Watts @ 240 Volts, 8.5" long | N1315-4500 |
| | 5500 Watts @ 240 Volts, 8.5" long | N1315-5500 |
| | 7000 Watts @ 240 Volts, 12" long | N1315-7000 |
| | 8000 Watts @ 240 Volts, 12" long | N1375-8000 |
| | 9000 Watts @ 240 Volts, 12" long | N1375-9000 |
| | 6000 Watts @ 480 Volts, 12" long | N1315-6000T4 |
| | 7000 Watts @ 480 Volts, 12" long | N1315-7000T4 |
| | 8000 Watts @ 480 Volts, 12" long | N1375-8000T4 |
| | 9000 Watts @ 480 Volts, 12" long | N1375-9000T4 |
| | 7000 Watts @ 440 Volts, 12" long | N1315-7000T5 |
| | 8000 Watts @ 440 Volts, 12" long | N1375-8000T5 |
| | 9000 Watts @ 440 Volts, 12" long | N1375-9000T5 |
| | 7000 Watts @ 346 Volts, 12" long | N1315-7000T6 |
| | 8000 Watts @ 346 Volts, 12" long | N1375-8000T6 |
| | 9000 Watts @ 346 Volts, 12" long | N1375-9000T6 |
| | 8000 Watts @ 208 Volts, 12" long | N1375-8000R |
| | Extra O-Ring | O RING SGB |
| Electrical | Thermistor (with wire leads) | USP9509 |
| | Auto Reset Hi-Limit 200°F (with wire leads) | L93 |
| | Temperature Control Board | TK2000 |
| | Digital Display | TKD2000 |
| | Power Distribution Block: 3 Pole | 16023-3 |
| | Power Distribution Block: 2 Pole | 67512 |
| | Transformer, 50VA, 380V - 185V | B050-3351-3 |
| | Transformer, 50VA, 480V - 208V | B050-3299-3 |
| | Transformer, 50VA, 600V - 195V | B050-3350-3 |
| | Magnetic Contactor, 40A (Res.), 208/240V Coil | C25DNF330B |
| | Magnetic Contactor, 50A (Res.), 208/240V Coil | C25DNF340B |
| | Magnetic Contactor, 65A (Res.), 208/240V Coil | C25DNF350B |
| | Magnetic Contactor, 75A (Res.), 208/240V Coil | C25FNF360B |
| | Magnetic Contactor, 90A (Res.), 208/240V Coil | C25FNF375B |
| | Triac, 600V (with wire leads) | TG40E60 |
| | Triac, 800V (with wire leads) | TG40E80 |
| | Flow Meter (1/2" NPT, 0.2-8 GPM) | TK FLOW BR |
| | Flow Meter (1" NPT, 0.5-40 GPM) | VT2511MSHNP000 |
| | Control Fuse | LGR-3 |
| Miscellaneous | Overlay cover for TKD2000 | TANKLESS OVERLAY |

SECTION VIII – WARRANTY

MANUFACTURER'S LIMITED WARRANTY

1. PRODUCT WARRANTY: Hubbell warrants the Hubbell Tankless Water Heater and its components as manufactured by Hubbell (the "Product") to be free from defects in materials and workmanship, under normal use and service for the period of time identified below beginning from the date of installation, provided that the Product is (i) installed within sixty (60) days from date of shipment from Hubbell and (ii) installed by a licensed electrician and plumber (*specific proof required*) and maintained in accordance with Hubbell's written instructions.

HEATING CHAMBER: Five (5) years

ELECTRICAL COMPONENTS: One (1) year

REPLACEMENT PARTS: Thirty (30) days

SUCH WARRANTIES DO NOT COVER:

7. Product failure caused by liming, sediment buildup, chemical corrosion, chlorine/chloride corrosion, or freezing.
8. Product failure caused by the failure to remove air from system prior to or during operation.
9. Product misuse, tampering or misapplication, accidental damage, improper installation, or the application of improper voltage.
10. Costs incurred for shipping, delivery, handling, and/or administrative charges.
11. Product failure due to lightening, flood or other natural or manmade calamities.
12. Labor charges of any kind.

THE FOREGOING WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR PATENT OR OTHER INTELLECTUAL PROPERTY RIGHT INFRINGEMENT.

2. LIMITATION OF REMEDIES AND DAMAGES: Hubbell's liability and Buyer's exclusive remedy hereunder will be limited solely, at Hubbell's option, to repair or replacement by the Hubbell Service Center with respect to any claim made within the applicable warranty period referred to above. Without limiting the generality of the foregoing, all warranty items shall be returned by Buyer, at its sole expense, to the Hubbell Service Center for replacement or repair. Hubbell reserves the right to accept or reject any such claim in whole or in part. Hubbell will not accept the return of any product without prior written approval from Hubbell, and all such approved returns shall be made at the Buyer's sole expense. HUBBELL WILL NOT BE LIABLE, UNDER ANY CIRCUMSTANCES, FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, INCLUDING BUT NOT LIMITED TO LABOR COSTS OR LOST PROFITS RESULTING FROM THE USE OF (OR INABILITY TO USE) THE PRODUCTS OR FROM THE PRODUCTS BEING INCORPORATED IN OR BECOMING A COMPONENT OF ANY OTHER PRODUCT OR GOODS.

3. FURTHER LIMITATIONS AND EXCLUSIONS AFFECTING YOUR WARRANTY: This warranty is void if the product is not installed in accordance with relevant, local electrical and plumbing codes and in accordance with the installation instructions specified by the manufacturer. Local codes will override manufacturer's instructions at the time of installation and if additional installation parts are required, the costs will be the responsibility of Buyer. Product nameplate identifying the model and serial number must be affixed to the unit and legible for the warranty to be exercised. Product without the nameplate is excluded from warranty consideration. Above ground level installations must be protected with drip pans and drains just as the codes call for protective requirements used in regular hot water tank installations. Buyer hereby accepts the entire responsibility for ascertaining whether they have

sufficient electrical power to operate our Tankless Water heaters as indicated in our specifications which are readily available at our website, in our brochures and contained in the shipping box for installers to read before installation. If Buyer has purchased without first ascertaining the cost for installation or the necessary power available for operation, Hubbell at its sole and complete discretion may allow a return and grant a refund less freight and less 30% of the retail price as a restocking fee. The refund will be conditioned upon a determination by Hubbell after inspection of the Product being returned (either unopened or in the original shipping box and packing) that the Product has not been damaged. This request, **and for this reason only**, must be made within 30 calendar days of receipt of the Product.

AFTER 30 CALENDAR DAYS FROM THE DATE OF PURCHASE THERE WILL BE NO RETURNS WHATSOEVER. BUYER ACCEPTS ALL SALES AS FINAL. ANY ALTERATION TO THE PRODUCT VOIDS ALL WARRANTIES. HUBBELL IS NOT RESPONSIBLE FOR ANY OTHER CHARGE OR EXPENSE INCURRED OTHER THAN THE ORIGINAL PURCHASE PRICE OF THE PRODUCT. Hubbell shall not be liable for consequential, special, incidental, or contingent expenses or damages arising directly or indirectly from any defect in or use of the Product nor will Hubbell be liable for any water damage arising directly or indirectly from the use of the Product or from the failure of or defect in any component part or connecting plumbing. Hubbell and Buyer agree to these and the above terms in their entirety and accept all sales as final without recourse to a credit card company and hereby agree that this Manufacturer's Limited Warranty shall be governed by the laws of the State of Connecticut any and all actions arising from or relating to this Manufacturer's Limited Warranty and any aspects of the Product shall be brought in a court of competent jurisdiction in Fairfield County, Connecticut.

WARRANTY PROCEDURE

4. PARTS REPLACEMENT PROCEDURE (Under Warranty within 1 Year): Have your licensed electrician determine the exact parts that are defective and require replacement. Please note that technical support is available for qualified technicians only (licensed electricians and/or plumbers). Technical support that involves potentially dangerous electrical conditions is not available to an unqualified person. When contacting Hubbell, please be sure that the technician has read the "Operation and Maintenance Manual" and has written down all the data from the Advanced Troubleshooting Section.

If, at the sole discretion of Hubbell, a component requires repair or replacement under the terms of this Manufacturer's Limited Warranty, the part must be purchased and paid for under our "Bill and Credit" terms and will be shipped via standard ground delivery. All shipping charges are not included and are the responsibility of the Buyer. If faster shipping service is desired, the Buyer must select and pay for same.

The replacement part purchased under our "Bill and Credit" terms is purchased via credit card and upon return of the defective parts Hubbell will determine the cause of failure, and if under warranty will issue a full credit less shipping charges. The returned part must be received by Hubbell within thirty (30) days of shipment of the replacement part. Hubbell will evaluate the returned part within ten (10) days, and if determined to be defective and covered under the terms of this warranty, full credit for the part will be issued.

Return warranty parts to: Hubbell Electric Heater
ATTN: Tankless Warranty
45 Seymour Street
Stratford, CT 06615



CERTIFICATE NUMBER 21-2125309DA
EFFECTIVE DATE 25May2021
EXPIRY DATE 24May2026
ABS TECHNICAL OFFICE Houston ESD - Ship Equipment

CERTIFICATE OF
Product Design Assessment

This is to certify that a representative of this Bureau did, at the request of

HUBBELL ELECTRIC HEATER COMPANY

located at

45 SEYMOUR STREET, PO BOX 288, STRATFORD, CT, United
States, 06615-0288

assess design plans and data for the below listed product. This assessment is a representation by the Bureau as to the degree of compliance the design exhibits with applicable sections of the Rules. This assessment does not waive unit certification or classification procedures required by ABS Rules for products to be installed in ABS classed vessels or facilities. This certificate, by itself, does not reflect that the product is Type Approved. The scope and limitations of this assessment are detailed on the pages attached to this certificate.

Product: Heater, Water

Model: MTX/MHX/MTXA Series

Endorsements:

Tier: 2 - PDA Issued

This Product Design Assessment (PDA) Certificate remains valid until 24/May/2026 or until the Rules and/or Standards used in the assessment are revised or until there is a design modification warranting design reassessment (whichever occurs first).

Acceptance of product is limited to the "Intended Service" details prescribed in the certificate and as per applicable Rules and Standards.

This Certificate is valid for installation of the listed product on ABS units which exist or are under contract for construction on or previous to the effective date of the ABS Rules and standards applied at the time of PDA issuance. Use of the Product for non-ABS units is subject to agreement between the manufacturer and intended client.

American Bureau Of Shipping
Jes Goodrich, Potten, Engineer/Consultant

NOTE: This certificate evidences compliance with one or more of the Rules, Guides, standards or other criteria of ABS or a statutory, industrial or manufacturer's standards. It is issued solely for the use of ABS, its committees, its clients or other authorized entities. Any significant changes to the aforementioned product without approval from ABS will result in this certificate becoming null and void. This certificate is governed by ABS Rules 1-1-A3/5.9 Terms and Conditions of the Request for Product Type Approval and Agreement (2010)

HUBBELL ELECTRIC HEATER COMPANY

45 SEYMOUR STREET

PO BOX 288

STRATFORD CT

United States 06615-0288

Telephone: 203-378-2659

Fax: 203-378-3593

Email: info@hubbellheaters.com

Web: www.hubbellheaters.com

Tier: 2 - PDA Issued

Product: Heater, Water Model: MTX/MHX/MTXA

Series

Endorsements:

Intended Service:

Marine and Offshore Application - Designed to provide Potable Hot Water for onboard Commercial Marine requirements (Non-Pleasure Craft).

Description:

-Tankless On Demand Electric Water Heater contains Heating Chamber manufactured of Copper and Brass, Immersion Heating Elements manufactured with Incoloy Sheaths, enclosed in a Type 304 Stainless Steel Case and provided with a Safety Thermostats and Flow Meter manufactured with Brass.

-Note: MTXA series is manufactured of 316L SS

Rating:

Heating Element Capacity (2 & 3 Elements): 5 thru 27 KW

Heating Element Capacity (6 Elements): 24 thru 54 KW

(Note: The MTXA chamber is constructed such that the water heater assembly can consist of 1, 2 or 3 heating chambers. When multiple heating chambers are used each will contain 6 heating elements resulting in water heaters with 3, 6, 12 or 18 elements. This, along with the ASME construction, allows for a maximum rating of 162kW in the MTXA)

Heater Chamber rated for 150 psi MAWP; Design Temperature 250°F

Rated Voltage: 208 thru 600 Volts 50/60 Hz

Phase Range: 1 & 3 (balanced)

Inlet/Outlet Size: 1" or ¾" Dielectric Union copper Sweat

Minimum Flow Rate: 0.2 GPM

Maximum Flow Rate 40.0 GPM

Thermostat Range: 32°F (0°C) - 194°F (90°C) See attached
df" for Heater Overview Details

Service Restriction:

Unit Certification is not required for this product. If the manufacturer or purchaser request an ABS Certificate for compliance with a specification or standard, the specification or standard, including inspection standards and tolerances, must be clearly defined.

- i) Electric heaters are not suitable to be used for hazardous area.
- ii) For use in weather exposed areas, the electric heater must be enclosed in a NEMA 4X enclosure.
- iii) Electric heater with a maximum aggregate current 16 Amperes may be connected to a single final branch circuit in accordance with MVR 4-8-2/7.19

Comments:

The Manufacturer has provided a declaration about the control of, or the lack of Asbestos in this product.

Notes/Drawing/Documentation:

Drawing No. Correspondence, TA Corres., Revision: -, Pages: 1
Drawing No. D-1455, MTXA, 3/6 Element Drawing, Revision: -, Pages: 1
Drawing No. D-1456, MTXA, 12 Element Drawing, Revision: -, Pages: 5
Drawing No. D-1457, MTXA, 18 Element Drawing, Revision: -, Pages: 3
Drawing No. Declaration of Conformity MTX MHX 2021, DOC, Revision: -, Pages: 4
Drawing No. Model_TXAMTXA_OM, Manual, Revision: -, Pages: 2
Drawing No. D-1134 Rev. - MTX/MHX, 2/3 Element Drawing (9 Sheets)

As of 25/May/2021**Design Assessed****Page 1 of 2****Tier: 2 - PDA Issued**

Drawing No. D-1135 Rev. - MTX/MHX, 6 Element Drawing (9 Sheets)

Model data sheet - Tankless On Demand Electric Water Heater

Hubbell Declaration of Conformity; letter dated 03/24/2016

Terms of Validity:

This Product Design Assessment (PDA) Certificate remains valid until 24/May/2026 or until the Rules and/or Standards used in the assessment are revised or until there is a design modification warranting design reassessment (whichever occurs first).

Acceptance of product is limited to the "Intended Service" details prescribed in the certificate and as per applicable Rules and Standards.

This Certificate is valid for installation of the listed product on ABS units which exist or are under contract for construction on or previous to the effective date of the ABS Rules and standards applied at the time of PDA issuance. Use of the Product for non-ABS units is subject to agreement between the manufacturer and intended client.

STANDARDS**ABS Rules:**

2021 Marine Vessel Rules 1-1-4/7.7, 1-1-A3 & 1-1-A4, 4-8-2/7.19; 4-8-3/1.7

National:

ANSI/UL 499(2014); UL KSGR.E182183 (Miscellaneous Water Heaters)

International:

NA

Government:

NA

EUMED:

NA

OTHERS:

NA

As of 25/May/2021**Design Assessed****Page 2 of 2**